

Special tool

Punch

115 589 13 59 00

Removal

- 1 Force out cover (1) for weather strip (2) by means of a plastic wedge, starting at ornamental molding for rear pillar.
- 2 Force weather strip (2) out of roof channel by means of a plastic wedge, starting at the rear.

Installation

- 3 Remove outside ornamental molding (4) from inside ornamental molding (5) and loosen the three upper screws on inside ornamental molding.
- 4 Push weather strip (2) against ornamental molding for rear pillar and connect to roof channel by means of punch (3). In final range, simultaneously push inside ornamental molding (5) slightly away from front wall pillar, so that weather strip (2) is seated under ornamental molding on front wall pillar.
- 5 Screw down inside ornamental molding (5) and install outside ornamental molding.
- 6 Push cover (1) for weather strip (2) against inside ornamental molding (5) and, starting at the front, connect to weather strip by means of punch (3), as well as ornamental molding to rear pillar.
- 7 Cut-off cover for weather strip in parallel with bottom end of ornamental molding on rear pillar.

