


Note

If outside mirror changes its position by itself, remove mirror, lift rubber cover and tighten clamping screw on adjusting mechanism as required.

Removal


Mirror Glass

- 1 Force glass out of ball socket by means of a plastic wedge and pull out laterally.

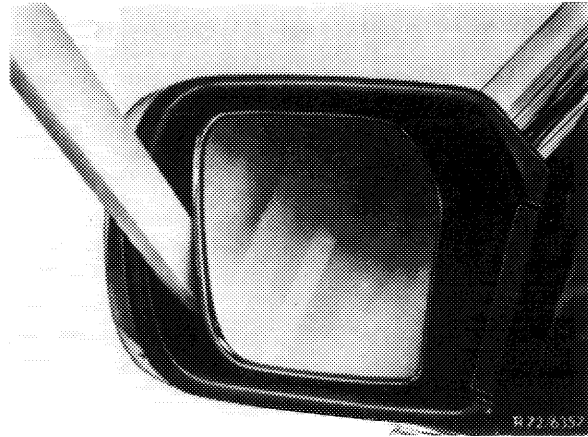

Outside Mirror Complete

- 2 Push plastic lock (3) out of handle (4) by means of a small screw driver and remove handle.
- 3 Pull off cover plate.
- 4 Unscrew the three screws behind plate.
- 5 Remove mirror.

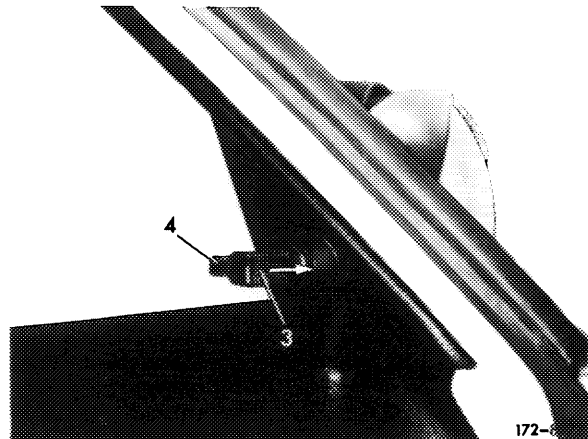

Installation

- 6 For installation proceed vice versa, making sure of perfect assembly and tight sealing.