


Color code of vacuum lines for central interlock

Vacuum line	Color code	
	1st version	2nd version
Suction line toward vacuum switch (27)	yellow	yellow
Interlocking line (25)	white	yellow-red
Unlocking line (26)	black	yellow-green

Removal


- 1 Remove door lining.
- 2 Remove safety clip (39) of pull rod (40) and disconnect pull rod.

Layout in sedans

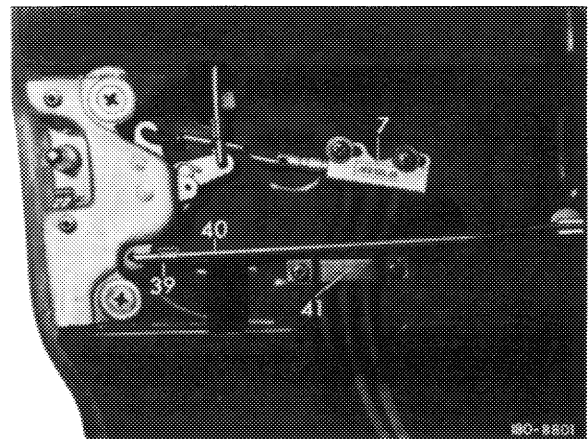

- 3 Unscrew oval head screws from holding clip (41) and remove holding clip.
- 4 Unscrew oval head screws from vacuum switch (7).


Layout in coupe

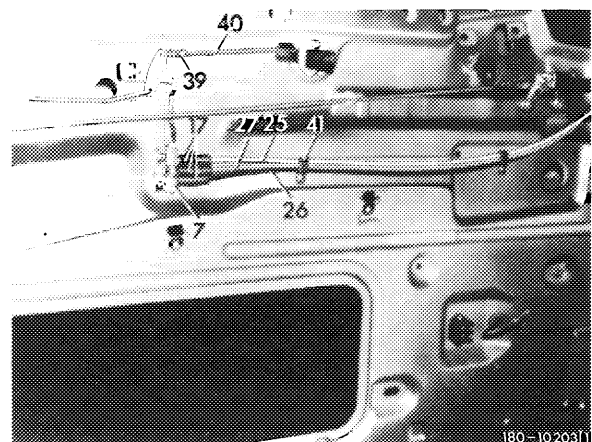

5 Remove safety clip (37) of safety rod (38) and remove safety rod.

6 Pull connections (17) with interlocking line (25), unlocking line (26) and suction line (27) from vacuum switch (7).

7 Disconnect vacuum switch on door lock.

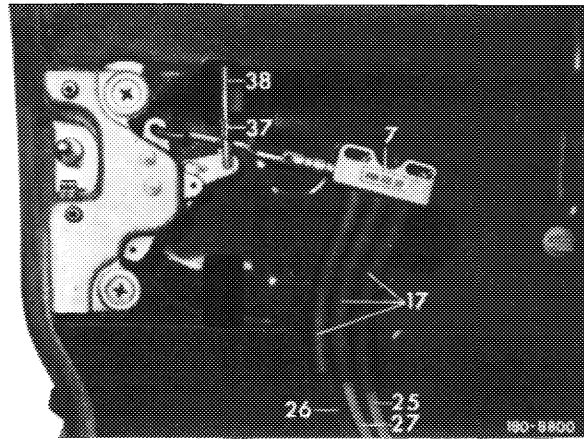


Installation

8 Attach vacuum switch to door lock.

9 Slip connections (17) with interlocking line (25), unlocking line (26) and suction line (27) on vacuum switch (7).

10 Attach safety rod (38) to door lock and slip-on safety clip (37).

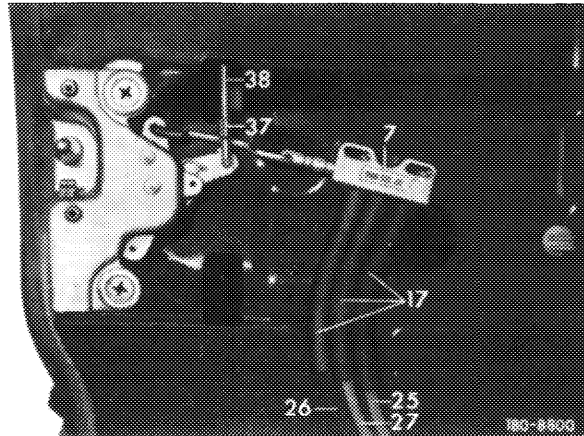


11 Attach vacuum switch (7) with oval head screws in such a manner that switch will be hard to move within its oblong holes.

12 Attach holding clip (41) with oval head screws.

13 Attach pull rod (40) and clip-on safety clip (39).


14 Run engine for a short moment, insert door key into lock and open and close.

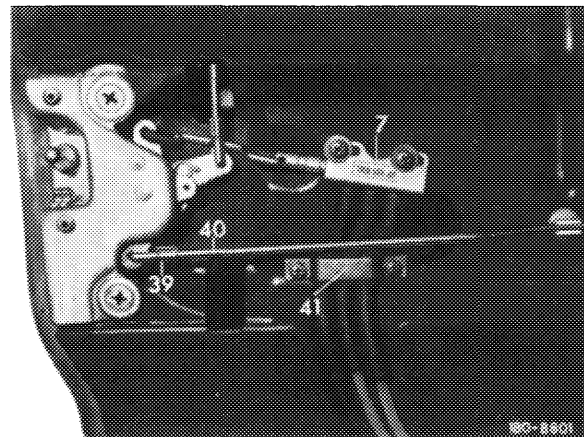

15 Adjust vacuum switch.


Version A (no longer installed):

Adjust light alloy vacuum switch in such a manner that outer edge of switch in locked condition is in alignment with center of outer adjusting groove or in unlocked condition with center of inner adjusting groove.

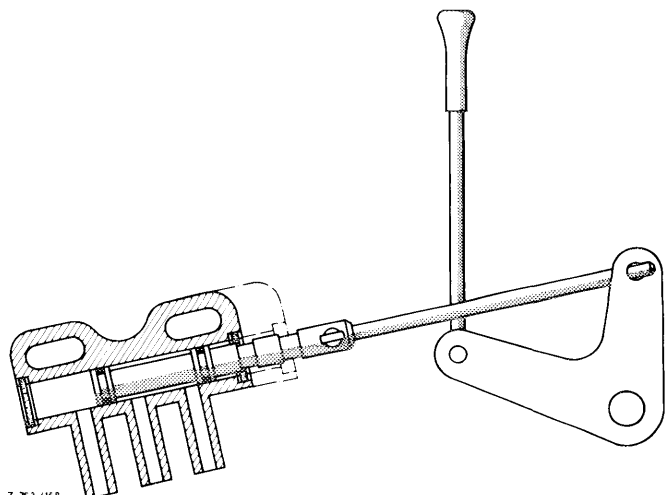

Version B (no longer installed):


Adjust plastic vacuum switch in such a manner that the outer edge of switch in locked condition is flush with outer adjusting groove, or in unlocked condition with inner adjusting groove.

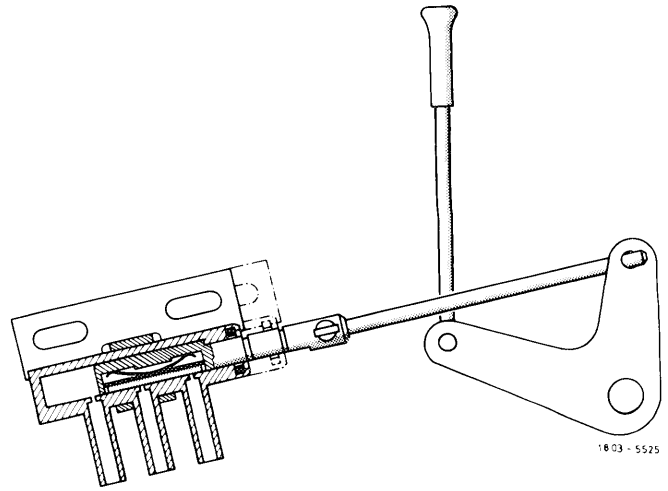

Version C:

Adjust plastic vacuum switch in such a manner that outer edge of switch in locked condition is in alignment with center of outer adjusting groove, and in unlocked condition with center of inner adjusting groove. This plastic vacuum switch replaces all previous versions.

Attention! If the adjusting range of version C is not enough, extend oblong holes in bracket by filing.

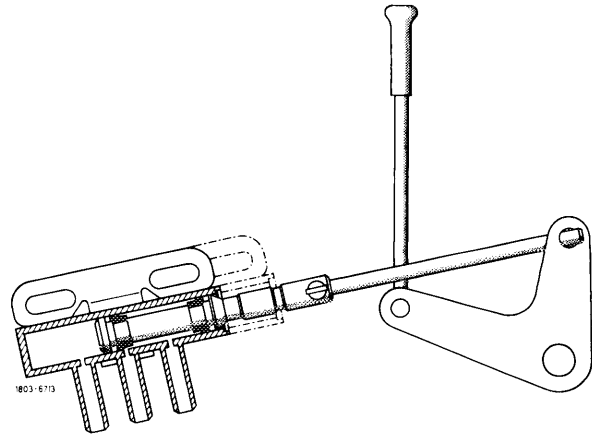

Note: The central interlock should already respond before the key has attained its respective end position.

16 Tighten oval head screws of vacuum switch.

17 Install door lining.

