


Color code of vacuum lines for central interlock


Vacuum line	Color code	
	1st version	2nd version
Interlocking line (25)	white	yellow-red

Removal

- 1 Unscrew oval head screws (28) from righthand cover of rear center piece (29).
- 2 Unscrew oval head screws (30).

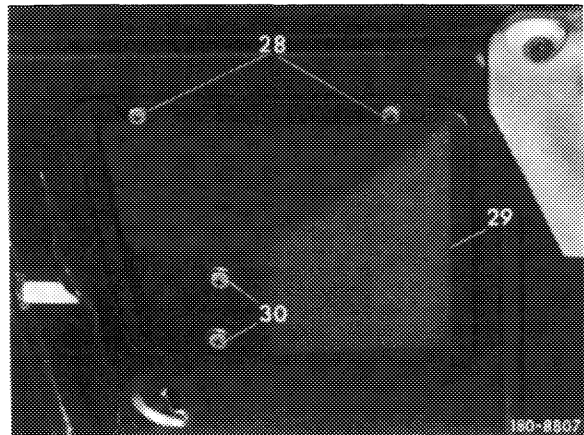


- 3 Remove cover of rear center piece.
- 4 Pull connection (17) with interlocking line (25) from vacuum element (4).
- 5 Pull vacuum element (4) with compression spring (18) out of sleeve (19).

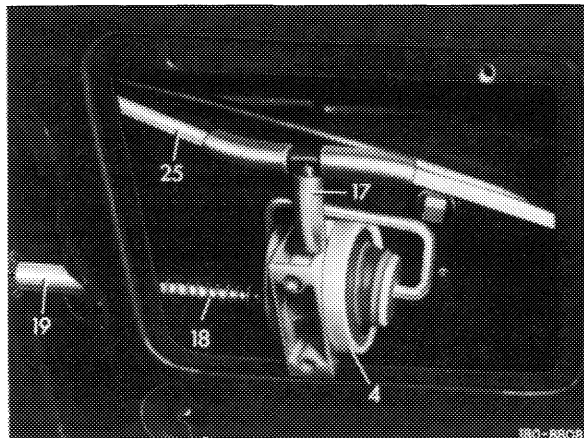


6 Pull-out vacuum element (5) and pull connection (17) with interlocking line (25) and locking line (26) from vacuum element.

7 Remove holding spring from vacuum element.

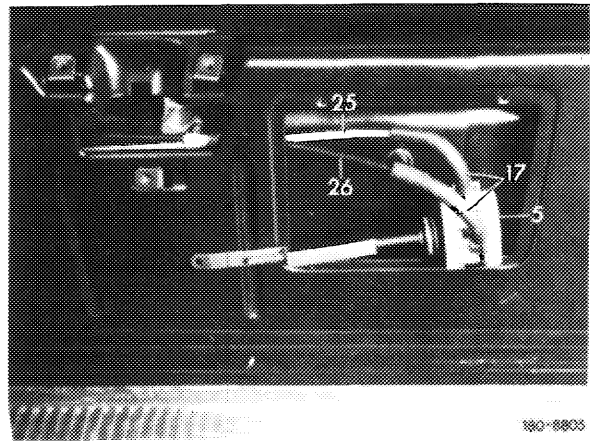


Installation


8 Connect interlocking line (25) and unlocking line (26) with connections (17) to vacuum element (5).

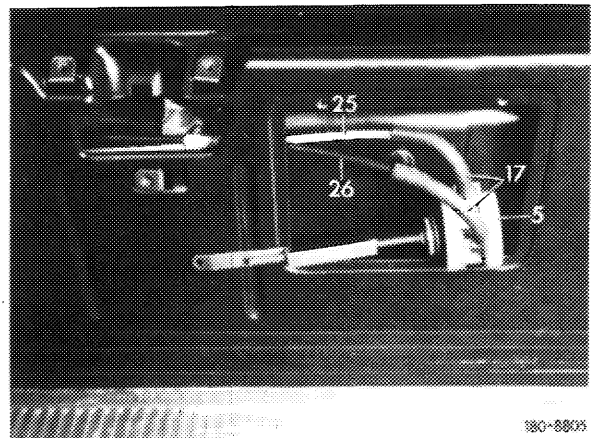

9 Introduce vacuum element into rear center piece, attach control rod and secure with locking ring (33).

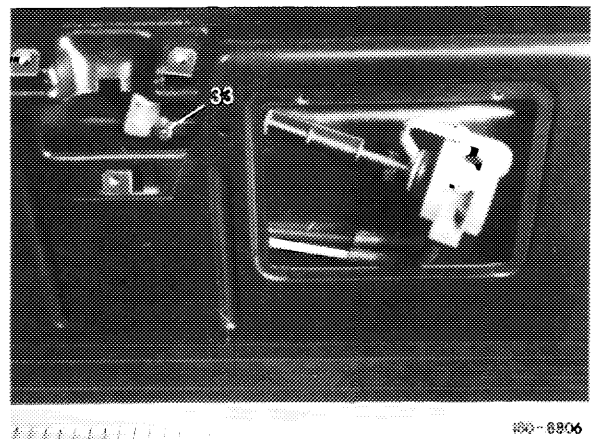

10 Attach holding spring (15) to vacuum element (5) and screw to lefthand cover of rear center piece (29) by means of oval head screws.

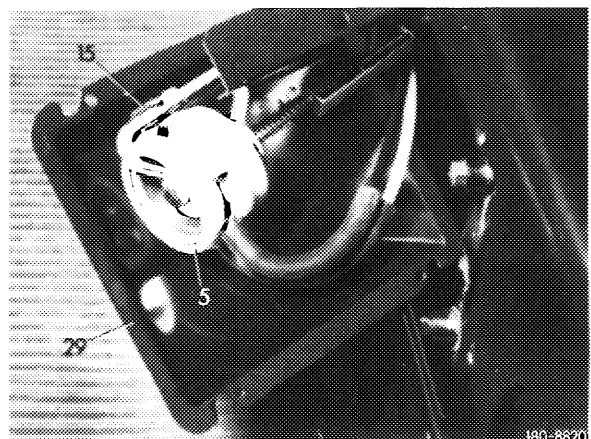

11 Insert lefthand cover of rear center piece (29) and attach with oval head screws (28).

12 Insert lock body (32) and tighten countersunk screws (31).

