



# 80-901 Functional diagram central interlock and air-conditioning system

Model 114.01/06, 115.0

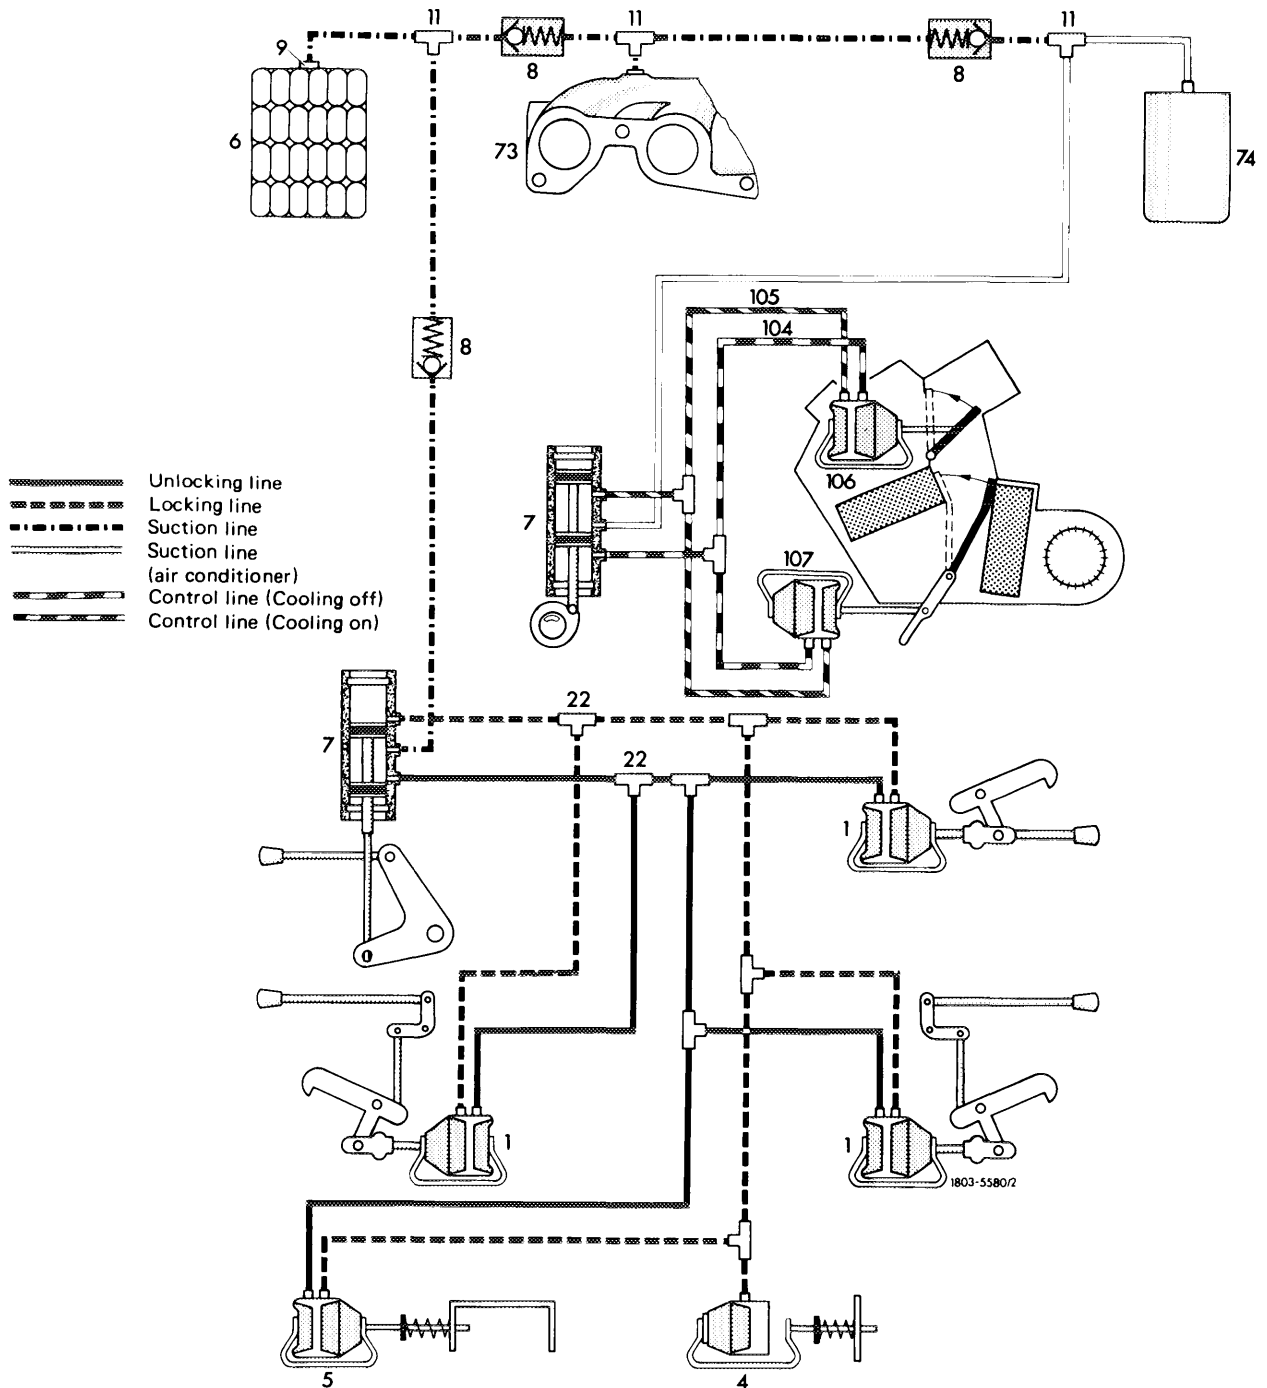

- 1 Vacuum element (driver's and rear doors)
- 4 Vacuum element (flap for tank filler neck)
- 5 Vacuum element (trunk lid)
- 6 Vacuum supply tank
- 7 Vacuum switch
- 8 Check valve
- 9 Seal
- 11 Distributor

- 22 Distributor
- 73 Intake pipe
- 74 Vacuum supply tank (air-conditioner)
- 104 Control line (Cooling off)
- 105 Control line (Cooling on)
- 106 Vacuum element right (air-conditioner)
- 107 Vacuum element left (air-conditioner)

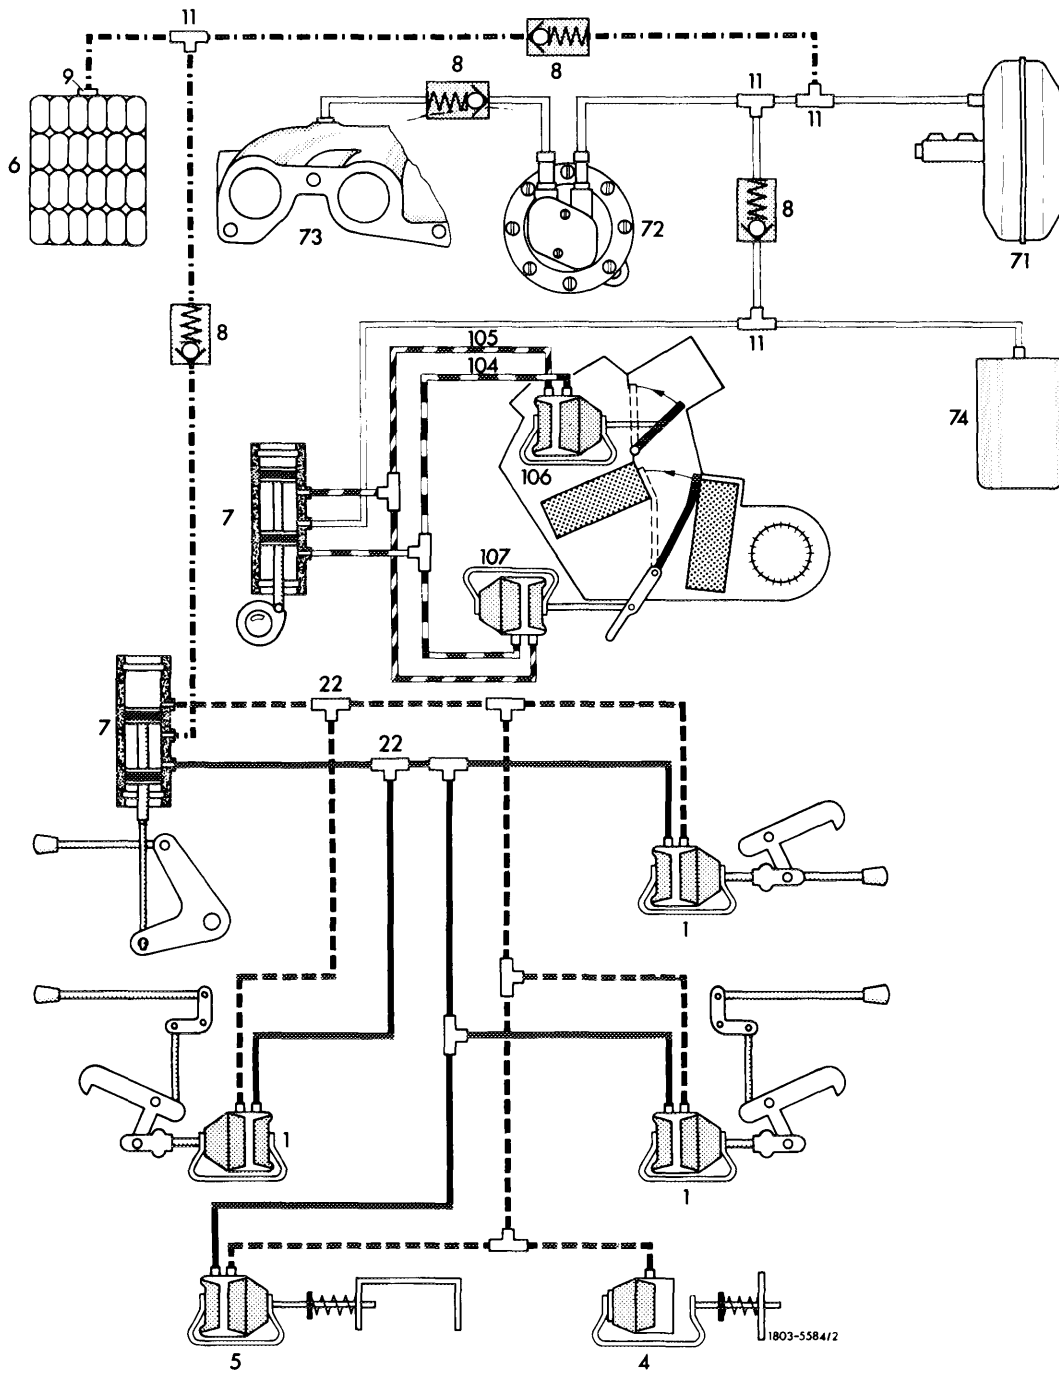

- Unlocking line
- - - Locking line
- · - · Suction line (central interlock)
- Suction line
- · - · Control line (Cooling off)
- · - · Control line (Cooling on)

- |  |  |
|--|--|
| 1 Vacuum element (driver's and rear doors)   | 71 Brake unit                              |
| 4 Vacuum element (flap for tank filler neck) | 72 Vacuum pump                             |
| 5 Vacuum element (trunk lid)                 | 73 Intake pipe                             |
| 6 Vacuum supply tank                         | 74 Vacuum supply tank (air-conditioner)    |
| 7 Vacuum switch                              | 104 Control line (Cooling off)             |
| 8 Check valve                                | 105 Control line (Cooling on)              |
| 9 Seal                                       | 106 Vacuum element right (air-conditioner) |
| 11 Distributor                               | 107 Vacuum element left (air-conditioner)  |
| 22 Distributor                               |  |