

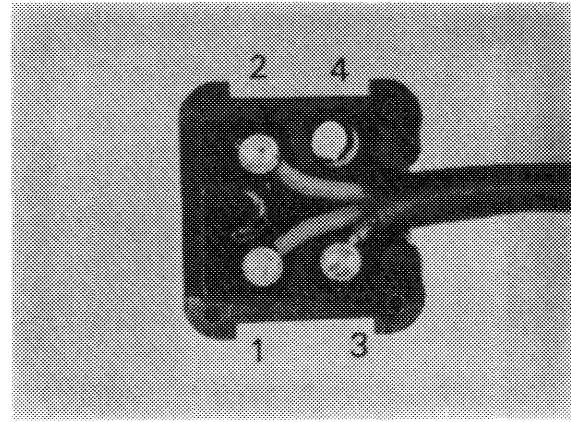
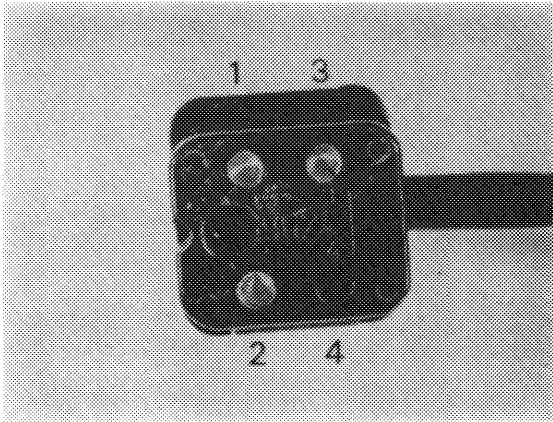


Fig. 3-31
Connector, 4 terminal

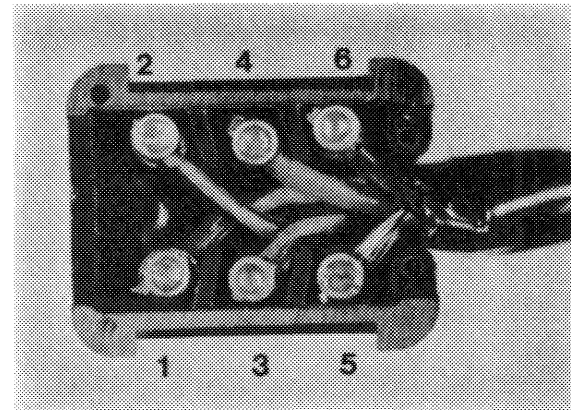
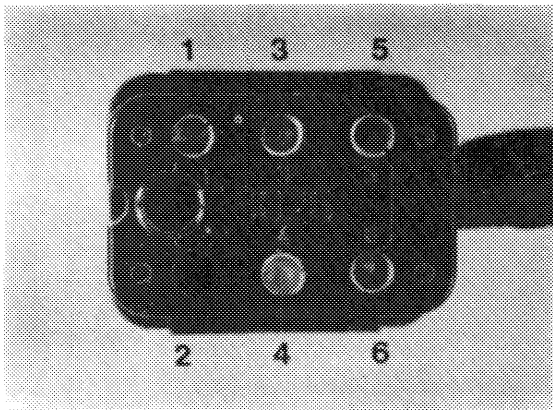


Fig. 3-32
Connector, 6 terminal

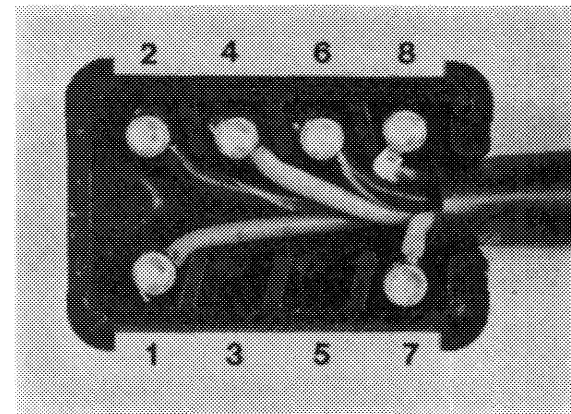
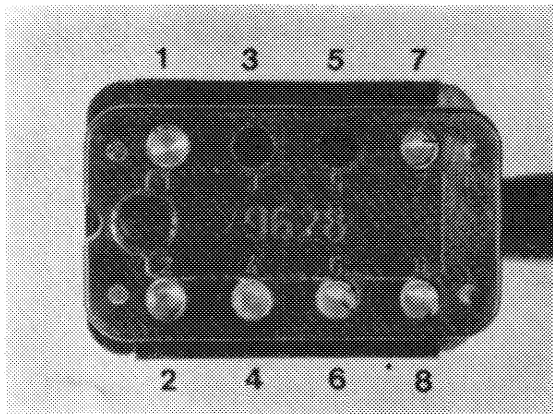


Fig. 3-33
Connector 8 terminal

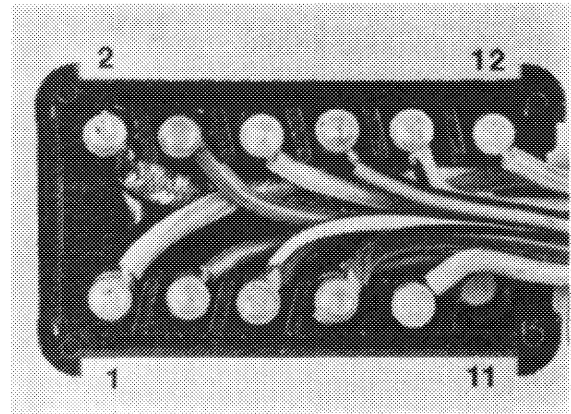
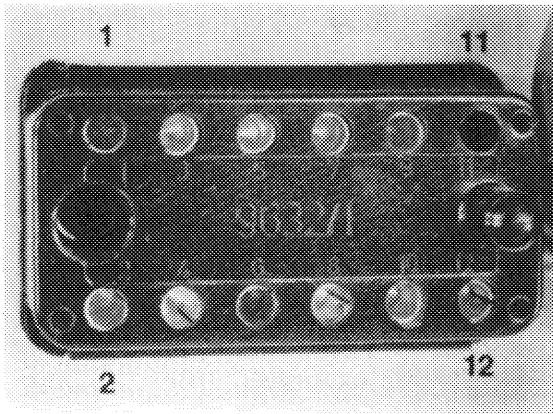


Fig. 3-34
Connector, 12 terminal

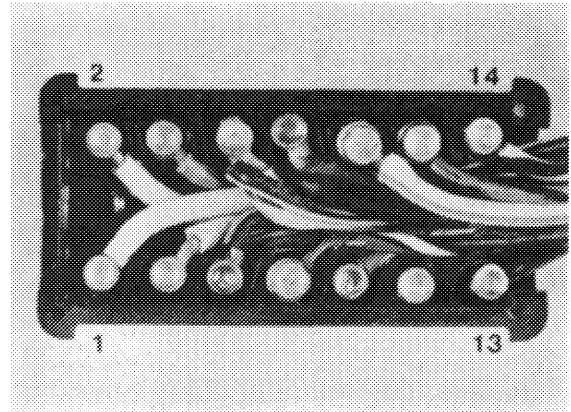
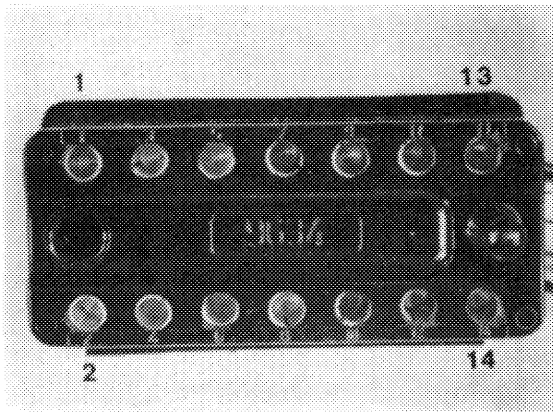


Fig. 3-35
Connector, 14 terminal

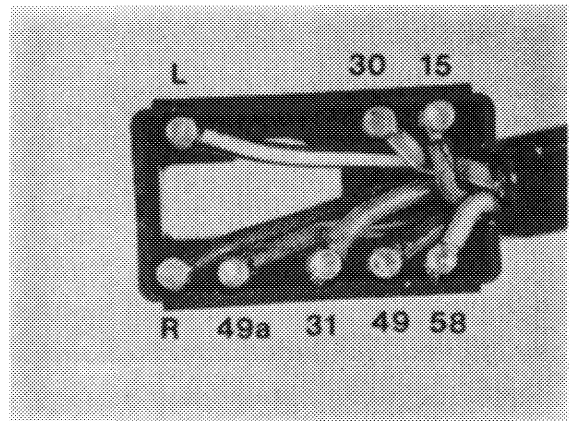
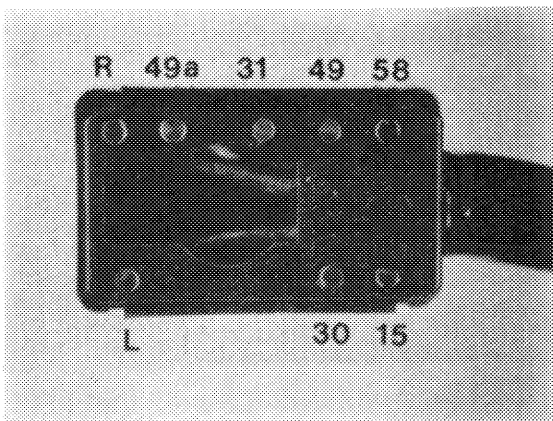


Fig. 3-36
Connector, flasher switch

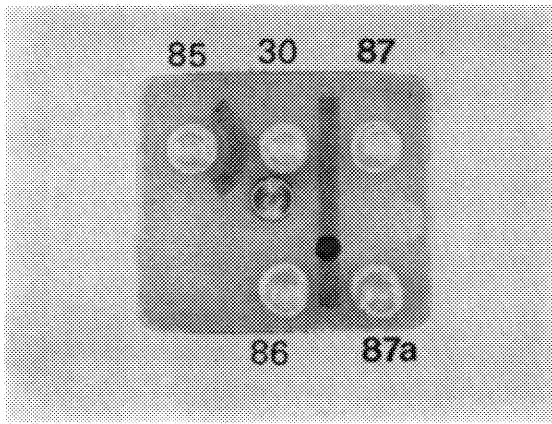


Fig. 3-37
Relay

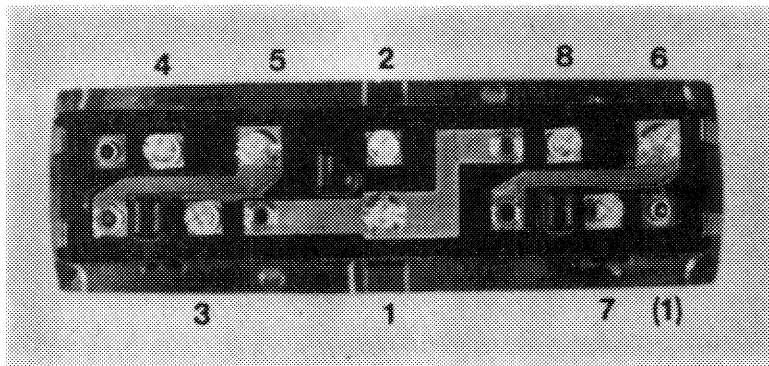


Fig. 3-38
Window switch group
(the 1 terminal has two alternate positions)

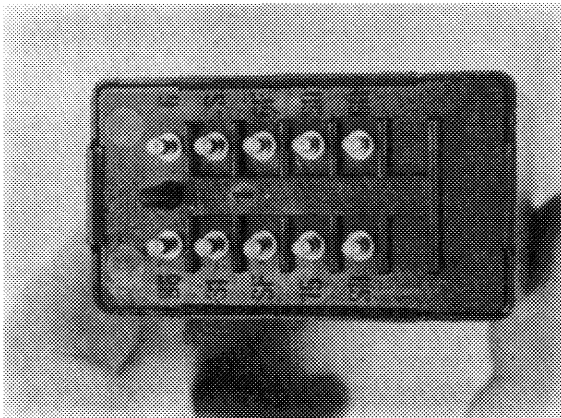


Fig. 3-39
Seat belt starter logic relay

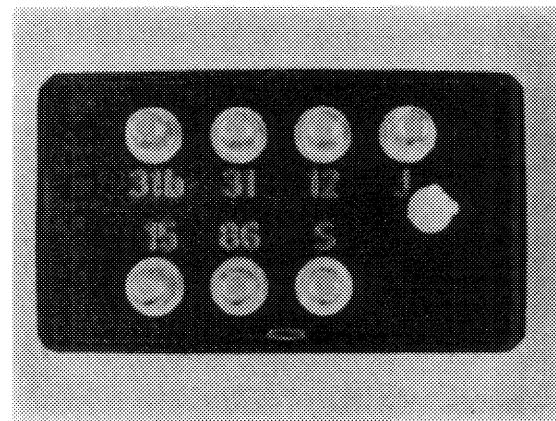


Fig. 3-40
Windshield wiper interval relay

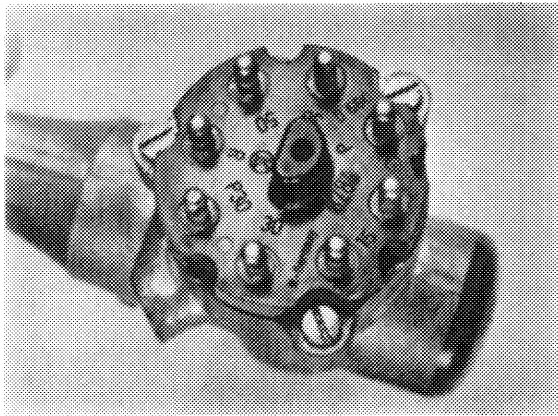


Fig. 3-41
Ignition switch

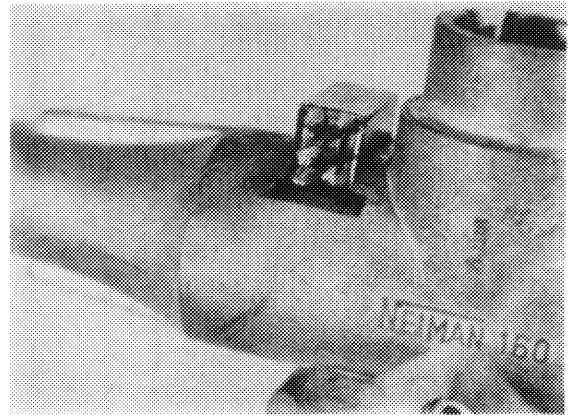


Fig. 3-42
Ignition lock warning switch

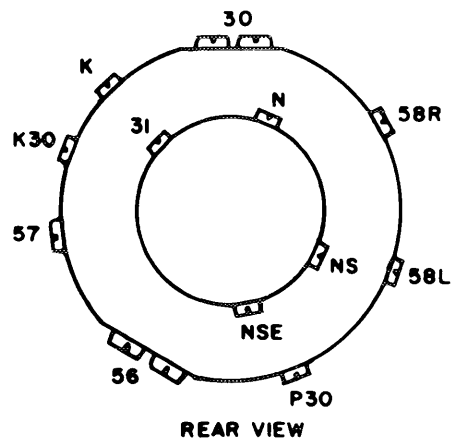


Fig. 3-43
Light switch

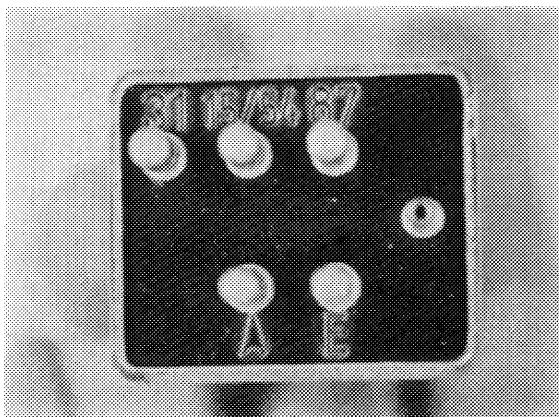


Fig. 3-44
Heated rear window delay relay

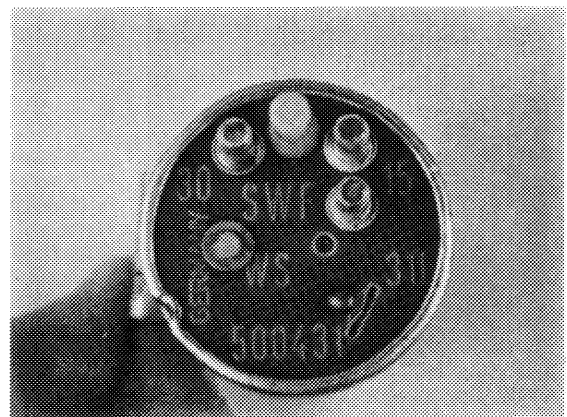


Fig. 3-45
Buzzer, warning

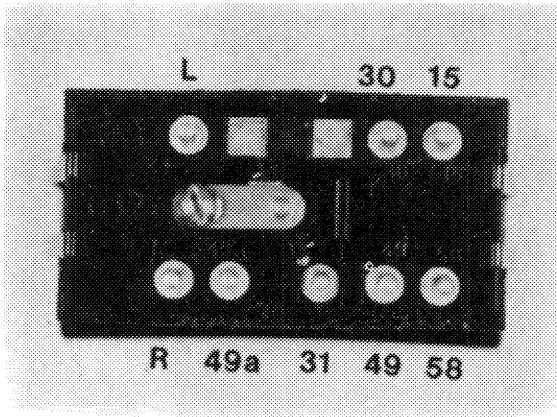


Fig. 3-46
Flasher switch

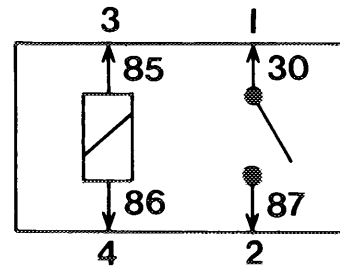


Fig. 3-47
Relay, normally open

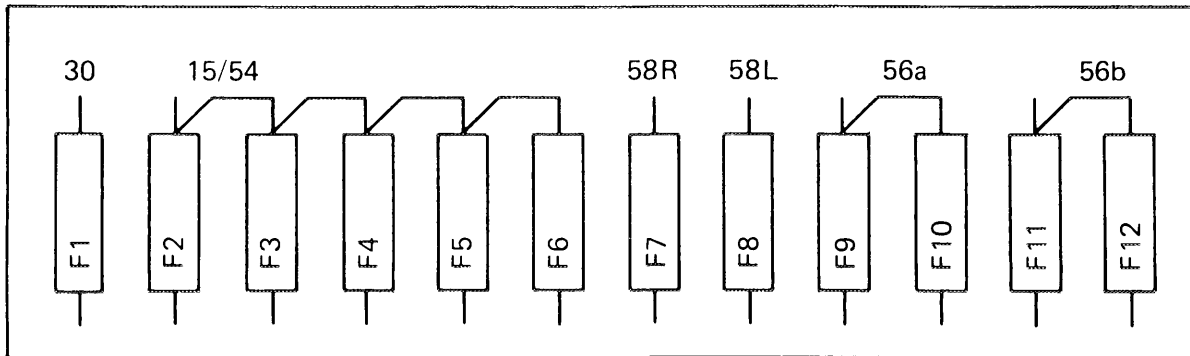


Fig. 3-48
Main fuse box