Removal

- 1 Remove glove box (68-140).
- 2 Unscrew electronic switching unit for blower control (19) from holder and pull off electric coupling.
- 3 For installation proceed vice versa.
- 4 Check automatic climate control for function.

