## Removal

- 1 Remove rear window.
- **2** Push covers for ornamental frame joint on rear window bottom at left and right sideways.
- **3** Remove ornamental frame at top and laterally from sealing frame.
- **4** Push ornamental frame at bottom out of sealing frame.

## Installation

**5** For installation proceed vice versa.

Push ornamental frame into sealing frame prior to installation of rear window.