


Removal

- 1 Remove door lining (72–100).
- 2 Unscrew screw (1) on rear hook of door lining.
- 3 Remove arm rest with grip.

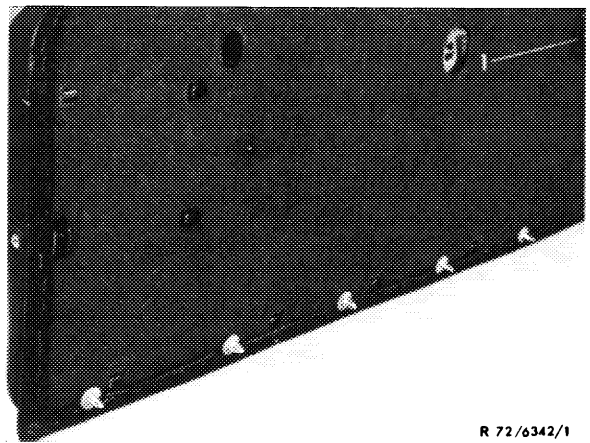

R 72/6342/1

Installation

- 4 For installation proceed vice versa.