

Every 45 000 km / 30 000 miles

All types

Types of grease and quantities


Type	Grease type	Quantity in hub-cap (up to flanged edge)
100	High temperature anti-friction grease (see: Operative Materials Page 265,1)	approx. 20 g
107 108 109 111 113 114 115	Anti-friction grease (see: Operative Materials Page 265)	
116	Anti-friction grease (see: Operative Materials Page 265)	approx. 15 g

Special tool

Removal and re-fitting device for hub-cap


000 589 91 33 00

- Using special tool remove hub-cap from front wheel hub.
- Remove old grease from hub and hub-cap.

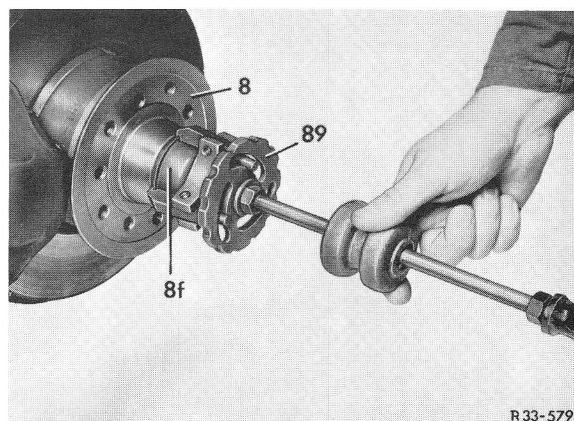

8 Front wheel hub 89 Special tool for removal and fitting of hub-caps
8f Hub-cap

- Refill hub-cap with anti-friction grease up to the flanged edge.
- Replace hub-cap using special tool.

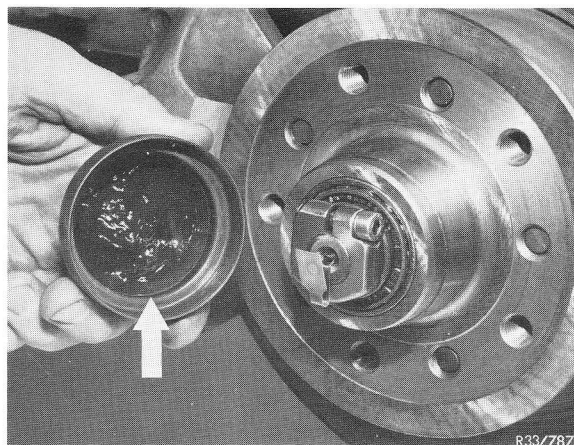

R33/7871