


Types 100 109

Every 45 000 km / 30 000 miles

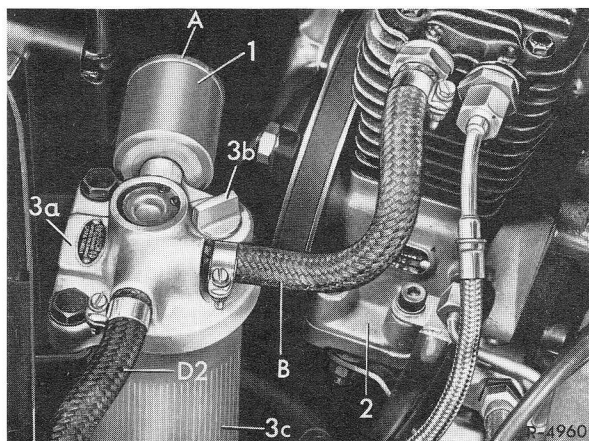

A Air suction intake and air release outlet

1 Air filter

3a Valve housing

- Mount new air filter on anti-freeze device, observing correct seat of rubber sealing ring.

Note: On the type 100 the air filter is connected to the anti-freeze device by a hose line.