



All vehicles with power steering

Every 45 000 km / 30 000 miles

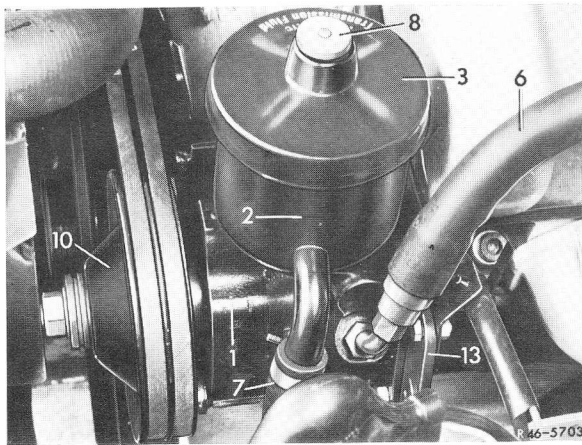

8 Knurled or wing nut

- Remove wing nut or knurled nut from reservoir, remove end cover.

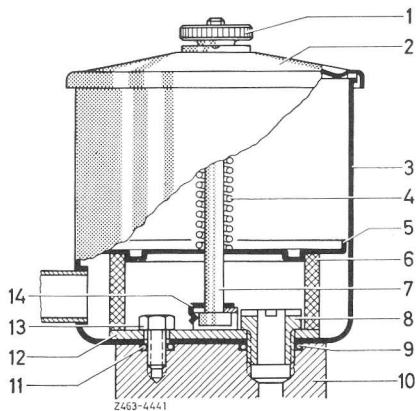

- 4 Compression spring
- 5 Stabilizer plate
- 6 Filter element

- Remove compression spring, stabilizer plate and filter element. Install new filter element, then install stabilizer plate and compression spring.
- **Fill reservoir** with automatic transmission fluid **up to** the punched-in mark. Position end cover, ensure correct seating of paper gasket. Screw on wing or knurled nut.