

Special Tool

Inspection device

115 589 04 23 00

Removal

- 1 Completely remove rear axle (35.1-010 or 020).
- 2 Remove rear axle center housing with rear axle shafts (35.1-110 or 120).
- 3 Remove semi-trailing arm (35.1-310).

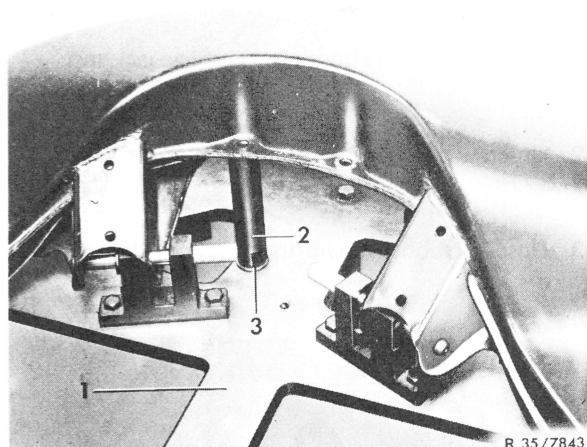


Fig. 1

- 1 Inspection device
- 2 Receiving bolt
- 3 Washer (2,5 mm thick)

- 4 Remove front rubber mounting from rear axle carrier (35.1-040).

Inspection

- 5 Check rear axle carrier and replace carrier in event of deviation from inspection device (Fig. 2).

Important Note: When checking rear axle carriers without spot-welded washers, place washer 2,5 mm thick under receiving bolt (Fig. 1).

Installation

For installation proceed vice versa.

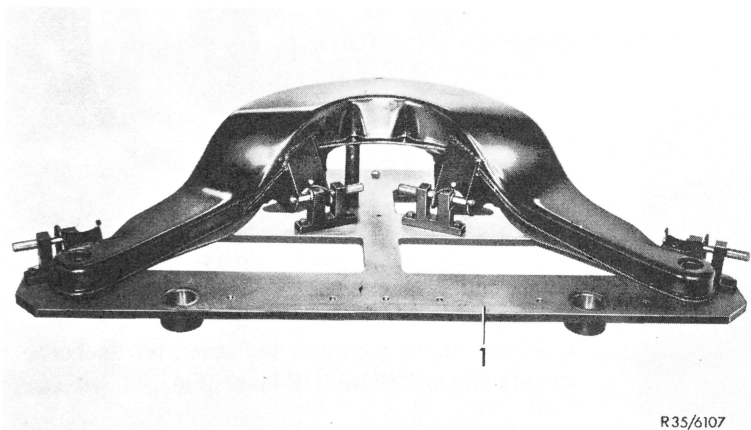


Fig. 2

- 1 Inspection device