


Every 15 000 km / 10 000 miles

All types


- Operate parking brake several times and have a second man observe the ease of movement of the rear brake cables, the relay lever and the equalizer, as well as the front brake cable.

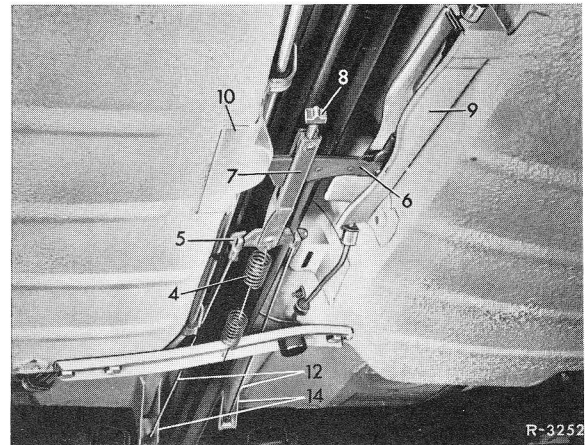


5 Equalizer  
6 Relay lever

12 Brake cable

- Visual inspection of the brake cables. Pay particular attention to the **rubber boots** (see arrows) which form the seal between the cable and the cable guide.

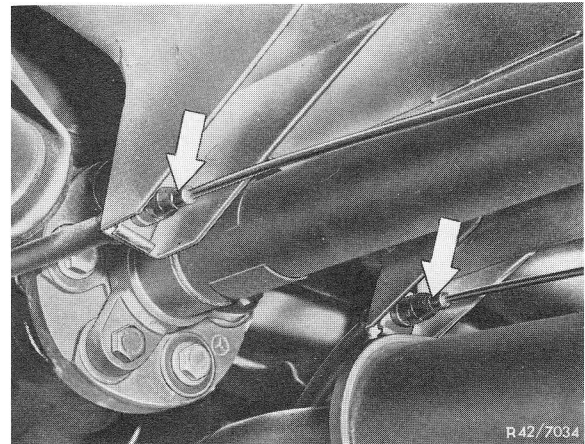

Types 107, 114, 115, 116

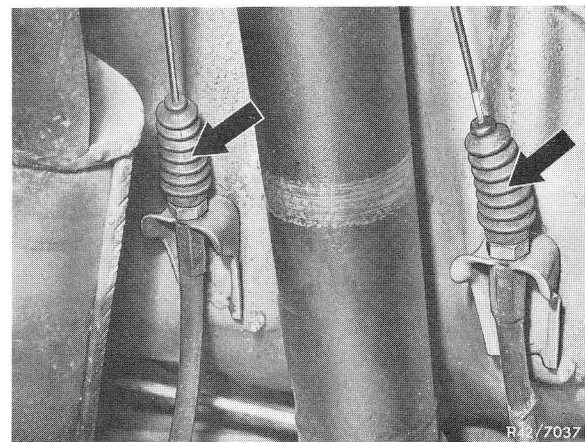

Types 108, 109, 111, 113