


Types 108 111 113 114 115

At the second maintenance job,
then every 15 000 km / 10 000 miles

Oil type

Hypoid transmission oil SAE 90

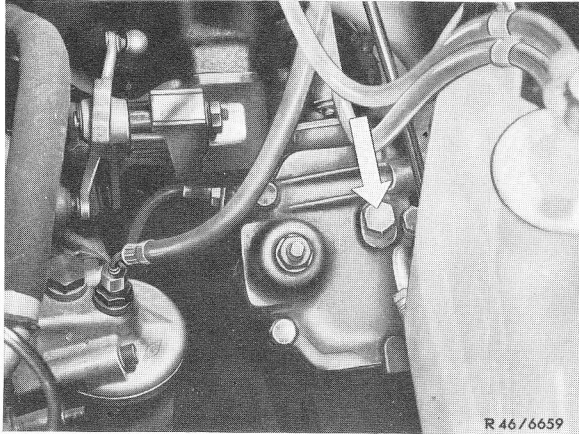

- Unscrew plug on the steering housing. With the steering in central position, the **oil level** should reach **to the lower edge** of the threaded plug hole. If necessary top up with hypoid oil SAE 90.