


All types

Every 45 000 km/30 000 miles

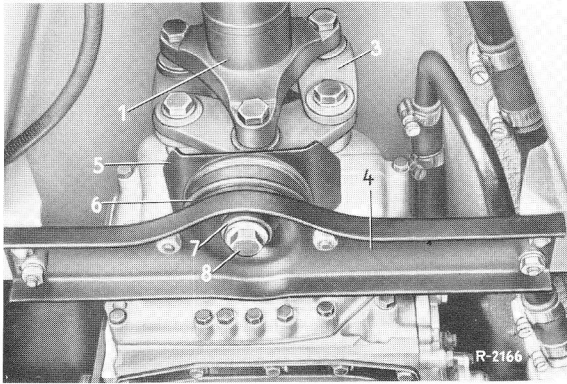


- Check joint discs for wear and damage as well as for distortion (visual checkup).
- Replace joint disc in the event of wear or damage.
- Release tension of propeller shaft in the event of distortions.

If distortions remain, also replace joint disc.


Type 100

3 Joint disc

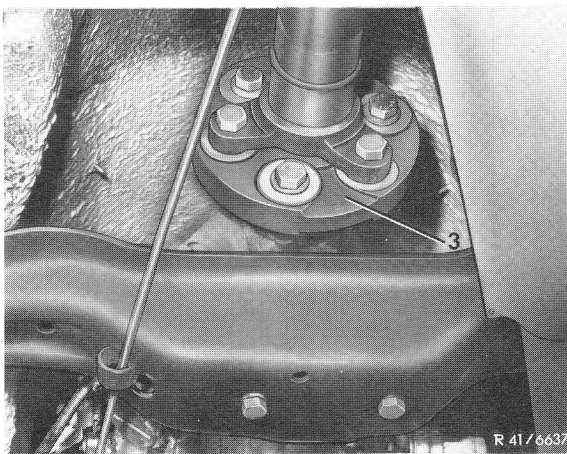

Types 108, 109

3 Joint disc

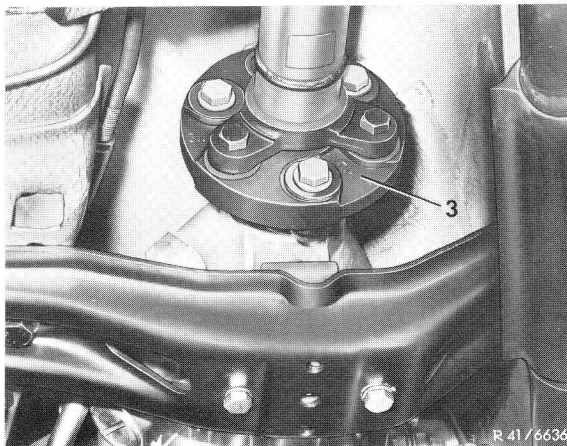

Types 107, 114, 115, 116

3 Joint disc