


At the first and second maintenance job,
then every 15 000 km/10 000 miles

All types

Fluid type


Automatic Transmission Fluid (ATF)

- Loosen winged nut or knurled nut of reservoir and remove cover.

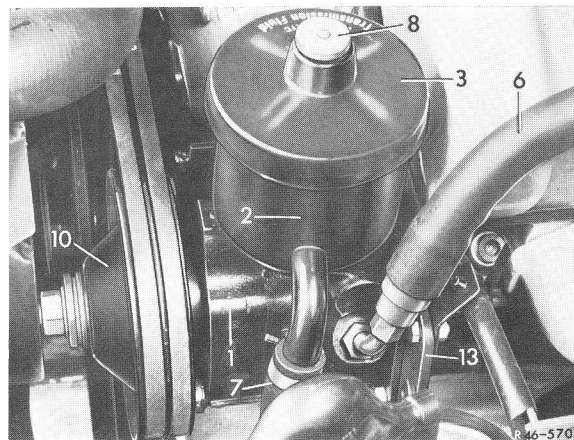

2 Reservoir
8 Winged or knurled nut

- With the fluid at operating temperature, the fluid level must reach to the mark stamped in the reservoir, if necessary top up with automatic transmission fluid.

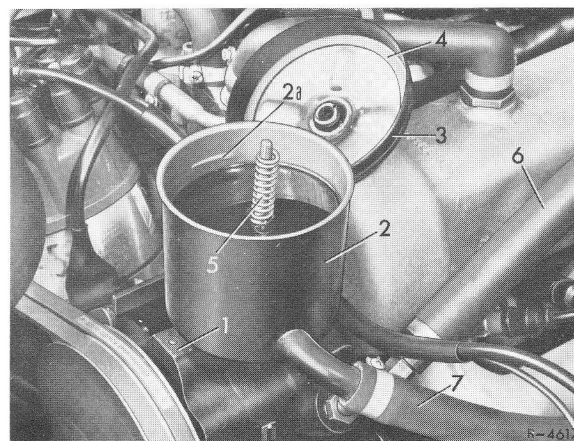

2a Mark in reservoir

- Replace cover and ensure good seating of the paper gasket. Tighten winged or knurled nut.