


At the first and second maintenance jobs,
then every 15 000 km / 10 000 miles

Types 100 109

Anti-freeze and Quantities


Anti-freeze	96% completely denatured alcohol (ethanol) or spirit
Capacity of reservoir	250 cm ³

- Fill the anti-freeze device* when the temperature falls below + 5° C (+ 40° F) and at the start of the cold season. To do this unscrew the sealing screw (3b) and fill the reservoir (3c) up to the longitudinal groove.

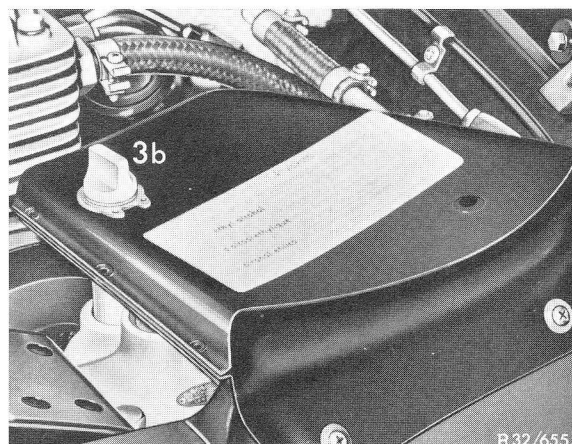

Type 100

3b Sealing screw with rubber ring seal

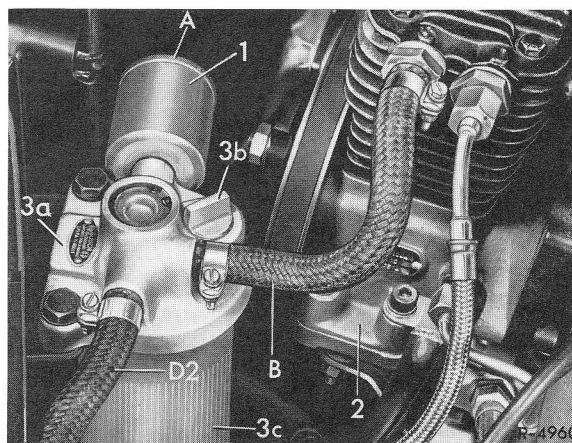

Type 109

- 1 Air filter
- 3a Valve housing
- 3b Sealing screw with rubber ring seal
- 3c Reservoir