


Engines M 114, 115, 130, 180

Every 15 000 km / 10 000 miles

**Check**

- Whether the flap shafts of the heater are worn.
- Whether the heater flaps abut inside and can be easily operated.
- Whether the bimetal spring makes the flap shaft of heater return to the stop spring with the engine cold.
- Spray the flap shafts of heater with graphite-based lubricant.

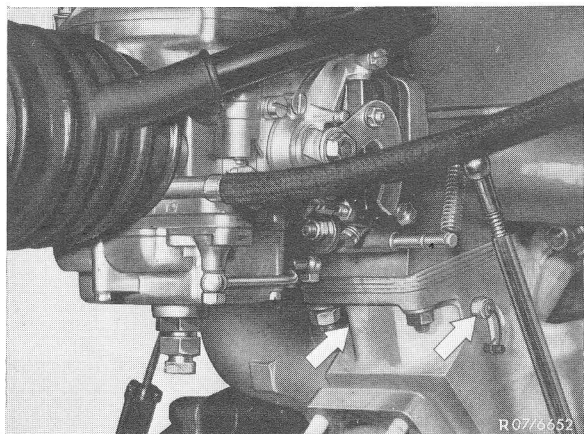