


Every 15 000 km / 10 000 miles

All types


- The play (a) on the steering wheel should not exceed 25 mm max.

If the play is larger, check the following parts:

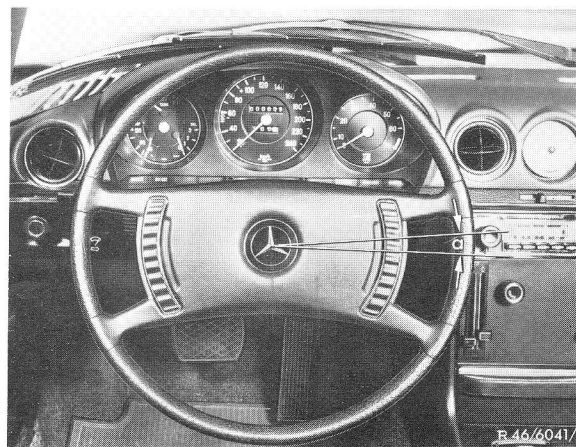

a = max. 25 mm

- Play of steering coupling in plastic bushings.

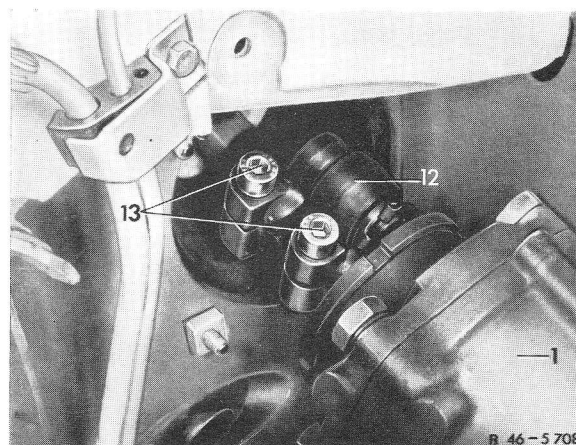


12 Steering coupling

- Ball joints of drag link and tie rod. In so doing, check the rubber sleeves of the joints. (see job No. 029).

- Seating of intermediate steering arm in rubber bearings.

Caution!

The **pressure device** of the steering unit **must not be adjusted** with the steering unit installed.

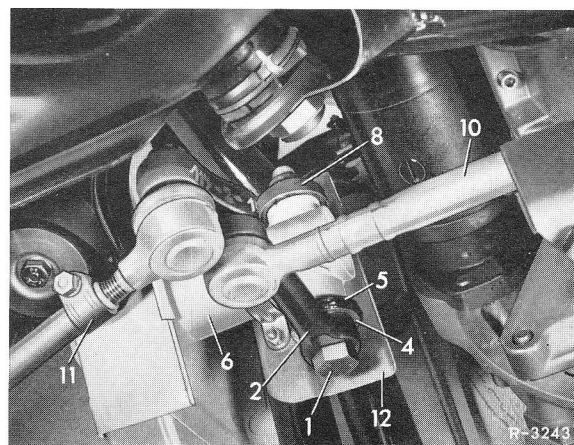

2 Steering intermediate arm
5 Rubber bearing

10 Drag link
11 Tie rod