



Every 15 000 km/10 000 miles

All types

Type of oil

For rear axle without limited slip approved oils	Hypoid transmission oil SAE 90 see: Operative Materials	Page 235
For rear axle with limited slip approved oils (observe reference plate on rear axle housing)	Special hypoid transmission oil SAE 90 see: Operative Materials	Page 235.3


Special Tools

Pin spanner SW 14 x 17 mm Insert for pin spanner		000 589 24 07 00 000 589 24 07 01
Screw driver insert SW 14 1/2"		commercially available e.g. Hazet 985-14

Note


Vehicle must be on its wheels for oil level checkup.

Continued on next page

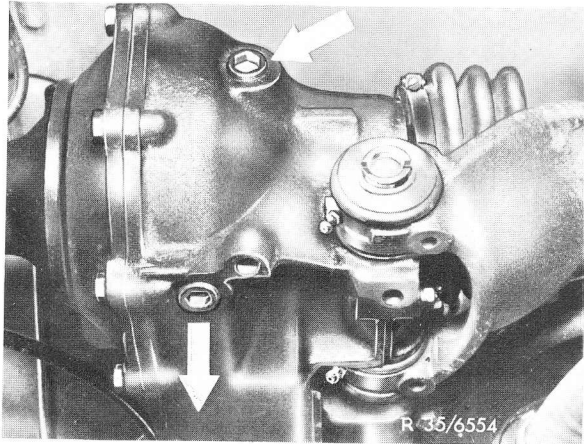


Model 100, 108, 109, 111, 113

- Unscrew drain plug from oil filler hole.
- The oil level is in order, if a negligible amount of oil emerges or if the oil level is at the lower edge of the opening.
If not, add oil.
- In the event of major oil losses, determine cause and repair.

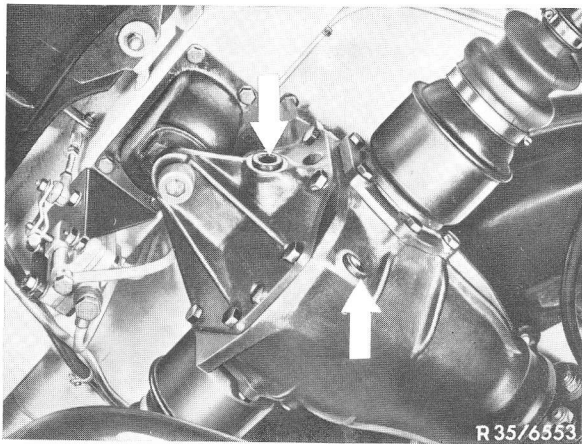

Model 107, 114, 115, 116

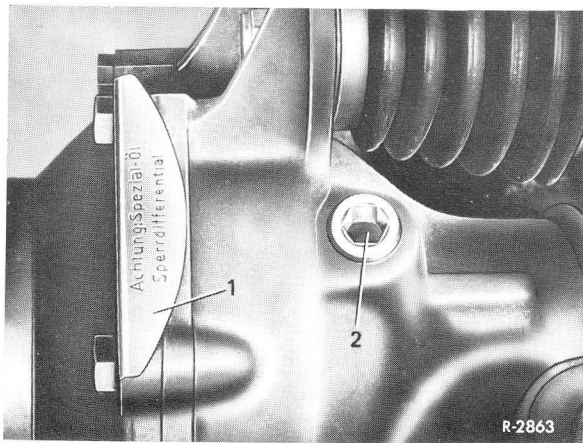

Rear axle with limited slip differential

- 1 Reference plate for rear axle with limited slip differential
- 2 Closing plug of filler hole