


In normal dust conditions clean every 15 000 km / 10 000 miles
renew every 45 000 km / 30 000 miles.


All gasoline engines

In severe dust conditions renew every 15 000 km / 10 000 miles.

- Remove filter cover and remove element.

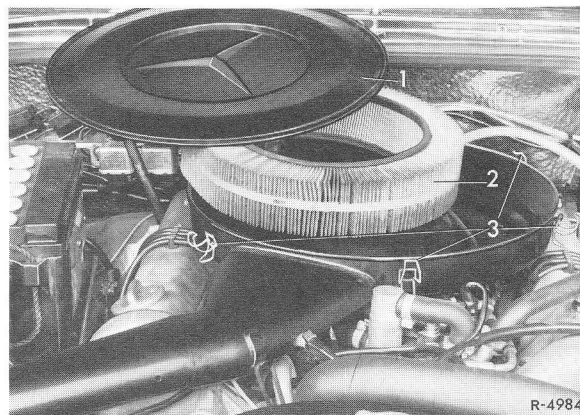

- Blow out element with compressed air from inside (max. 71 psi).

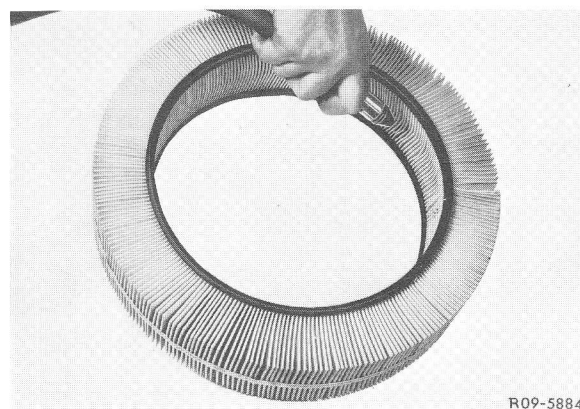


- Blow away dirt from outside of element by holding air gun at an angle. **Paper element must not be oiled or dampened.**

- Clean air filter cover and housing.

Caution! Do not use cotton waste.

- Install element, observing correct seat of rubber ring and cover.

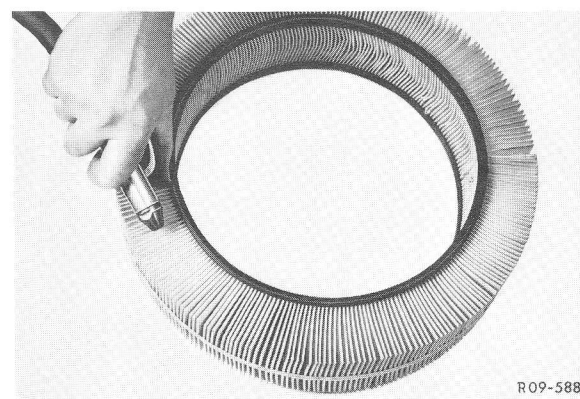

On vehicles with Engine M 130.923 (USA-Version, model year 1972) the air filter contains a ring of charcoal besides the air filter element.

The charcoal ring needs no servicing.

When installing the filter element, observe correct seating of the charcoal ring.

