

Check attachment of alternator

On vehicles with diesel engine
during first and second maintenance jobs,
then every 15 000 km/10 000 miles

All types with diesel engine
and Type 100

Type 100
only during first maintenance job


Tightening torque in kpm

Fixing screws	3.5
---------------	-----

Special tool


Torque spanner

- Tighten fixing screw of alternator on support (see arrow).

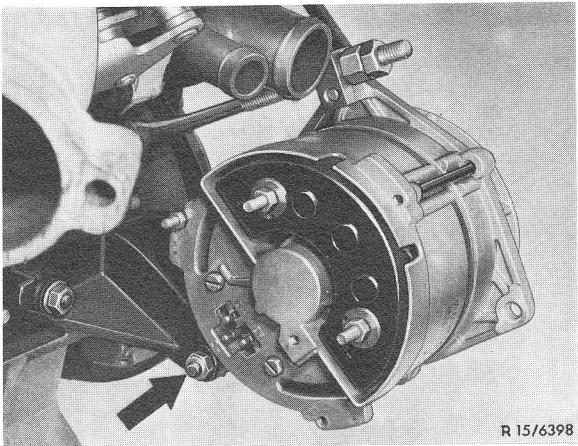


R 15/6398

Diesel engine OM 615

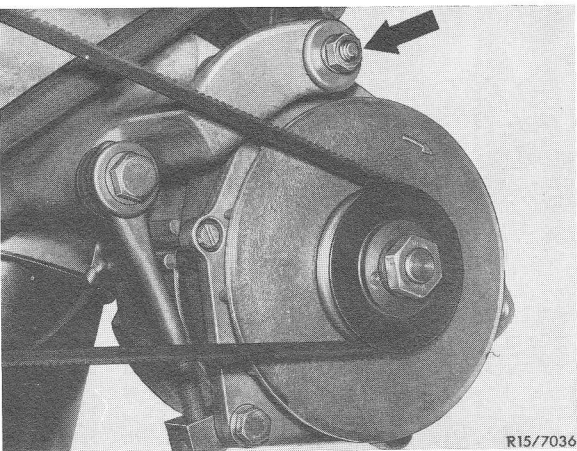

R15/7036

Type 100 Mounting, left side

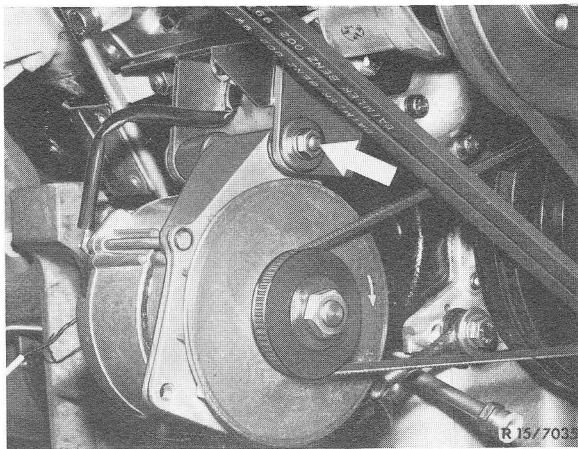

R 15/7035

Type 100 Mounting, right side

