


Every 45 000 km/30 000 miles

Engines M 110 114 116 117 180

Engine M 110

Carburetor engine


- Unscrew fuel return valve and screw plug at carburetor.
- Remove fuel filter and clean.
- Renew gasket at screw plug.
- Check sealing.

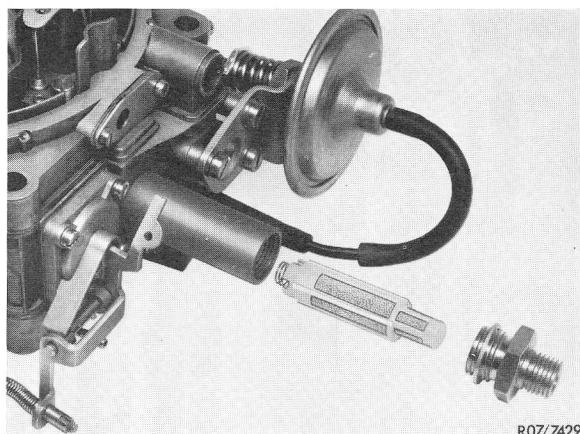

Engines M 114, M 180

Carburetor engine


- Loosen hose clips, take out fuel filter and install new fuel filter in direction of flow (arrow) along with new rubber hoses.
- Check sealing.

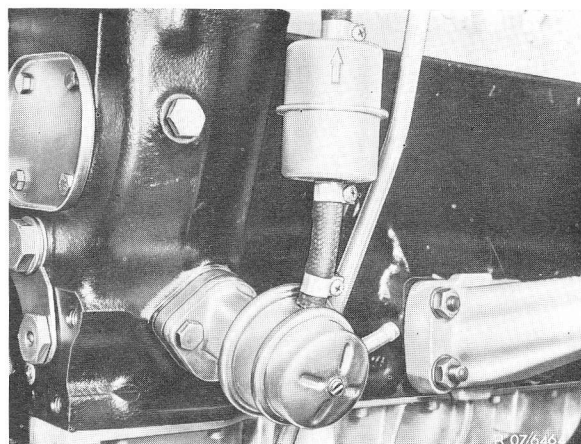


Engines M 114, M 116

Electronically controlled gasoline injection engine Fuel filter in engine compartment

- Unclamp fuel hoses left and right of filter.
- Loosen hose clips, take out fuel filter.
- Unscrew connecting plug from removed filter and mount on new filter with new gasket.
- Install new filter in direction of flow (arrow).
- Check sealing.

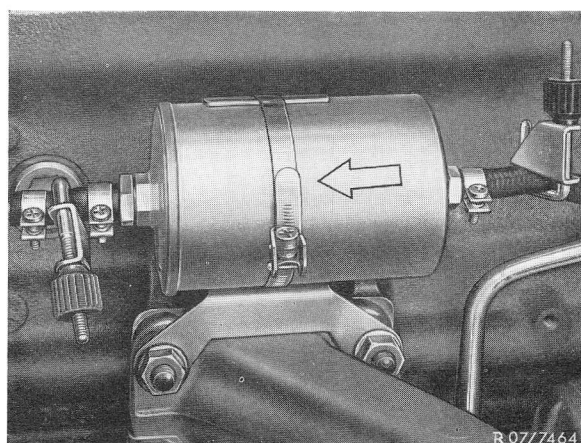

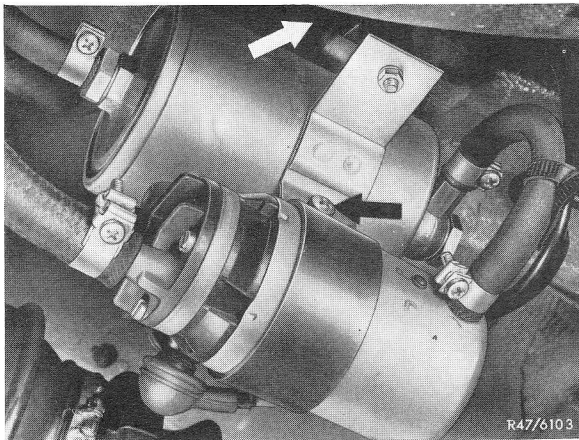

Engines M 110, M 114, M 116, M 117
Electronically controlled gasoline injection engine

Fuel filter between rear axle and fuel tank

- Unscrew cover box.
- Take off pressure hoses.
- Loosen fixing screws (arrows) and remove filter.
- Unscrew connecting plug from removed filter and mount on new filter with new gasket.
- Install new filter in direction of flow.
- Check sealing.