

Check sealing and condition of rubber boots and condition of steering linkage


029

Every 15 000 km / 10 000 miles

All types

- Carefully check rubber sleeves for ball joints of steering linkage for leaks and condition.

Note: Replace pertinent joint immediately in the event of a leaking rubber sleeve, since penetrating dirt will destroy the joint quickly. **Replacement of the rubber sleeve is permitted only** after checking that no dirt has entered inside joint.

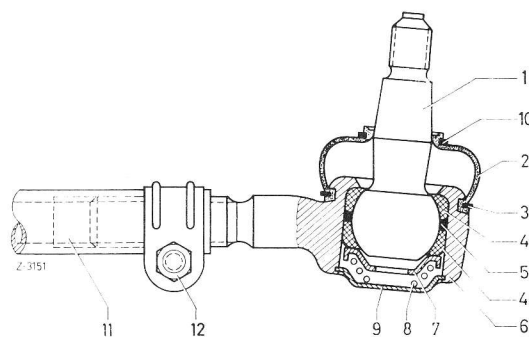

2 Rubber sleeve