


All types

At the first maintenance job,  
then every 15 000 km / 10 000 miles

#### Tightening torque, kpm

Hex.hd. bolts for attaching steering box to frame

6

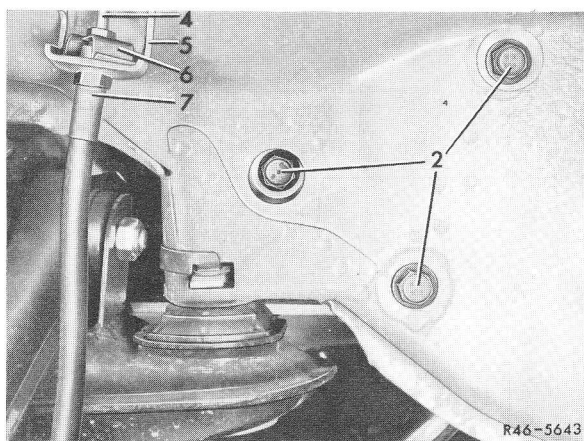

- Check the three fixing bolts for tight fit and retighten if necessary

2 Fixing bolts for steering box