

At the first and second maintenance jobs,
then every 15 000 km / 10 000 miles

All types with manual transmission


Fluid for hydraulic clutch operation

ATE Blue Original brake fluid


- Check fluid level in reservoir, if necessary top up to the max. mark.
- Clean ventilation bore in the cap.

Note: This applies for vehicles with separate reservoirs for brake and clutch systems as well as for vehicles with a common reservoir for both systems.

Caution! Brake fluid is corrosive. Do not bring into contact with paintwork.

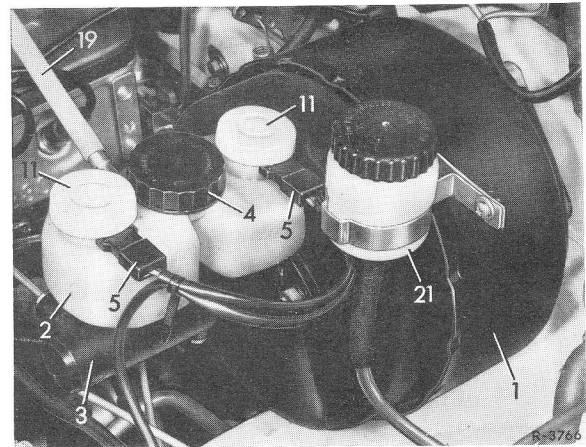

2 Brake fluid reservoir
21 Clutch fluid reservoir

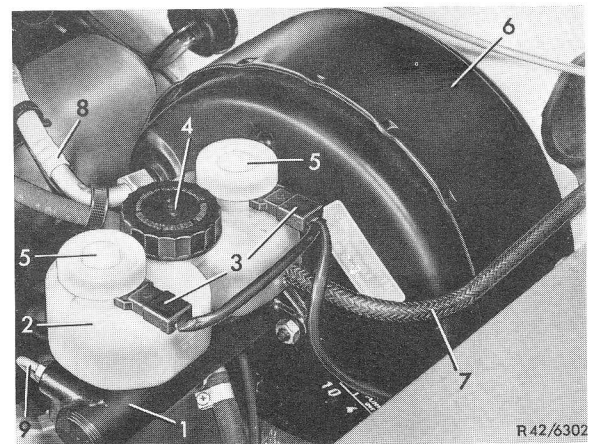

2 Common reservoir for brake
and clutch systems
7 Lead to clutch master cylinder