

At the second maintenance job,
then every 7 500 km / 5 000 miles


Engine M 115

Oil Viscosity

Engine oil specified for particular time of year	Engine oil
During prolonged periods of cold weather less than -20°C (-4°F)	ATF-oil
USA-version	ATF-oil

With oil reservoir

- Check oil level in reservoir and top up.

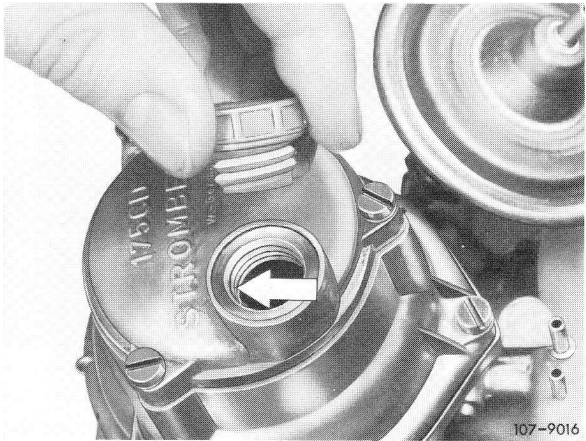

Without oil reservoir

- Unscrew plug and remove damper. The oil must reach up to the upper edge of the piston pin (see arrow).

