


Ali engines

At the second maintenance job,  
then every 7 500 km / 5 000 miles (Gasoline Engines)  
every 5 000 km / 3 000 miles (Diesel Engines)

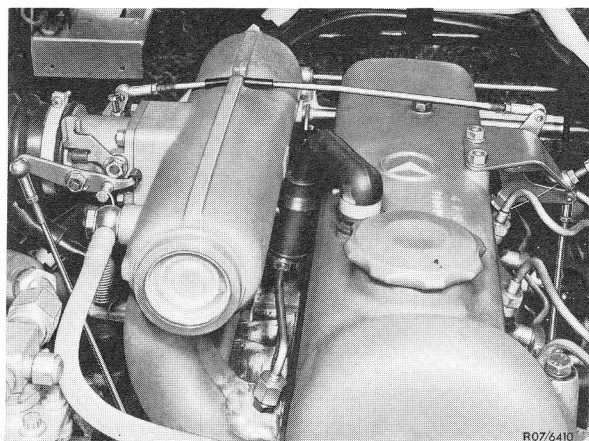

● Using oil can, lubricate all bearing seats of all control shafts, control levers, control linkage joints and cables.

● For vehicles **USA Version as from Model Year 1974** only the following grades of hydraulic oil may be used:

BP-Aero Hydraulik 1  
Castrol DB Hydraulik Fluid  
Esso Univers J-43  
Mobil Aero HFA  
Shell Aero Fluid 4

