


Every 15 000 km / 10 000 miles

All types


Loose grease.

- Hood lock.

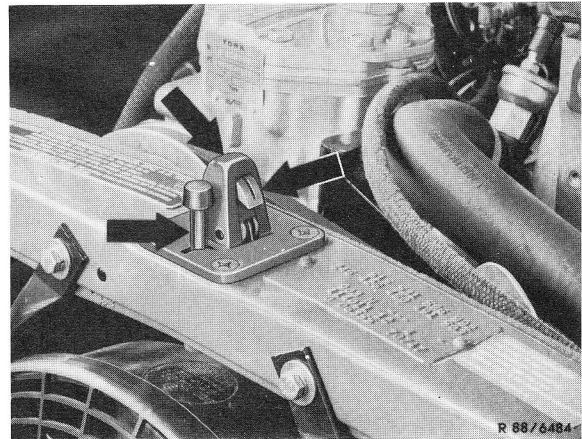


Oil (can)


- Hood stays.
- Hinges.

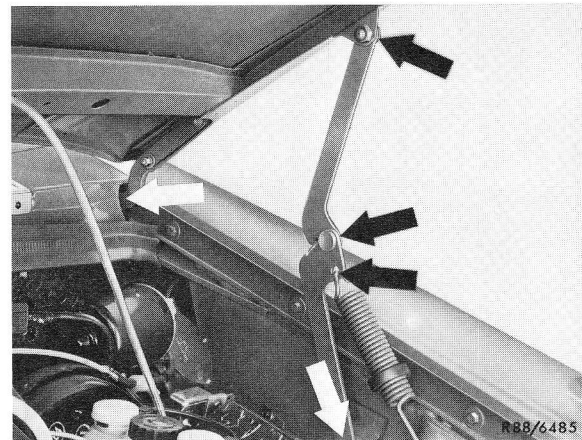

- Wire cable.

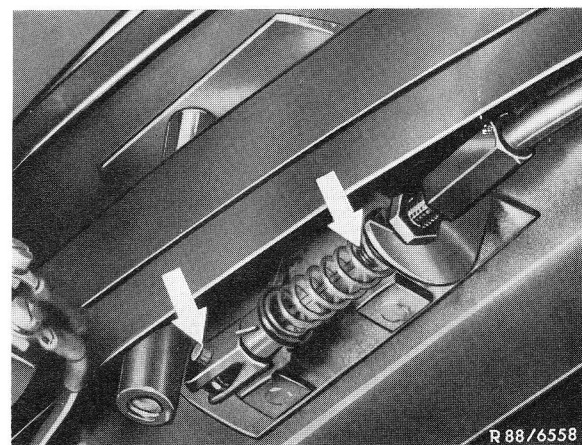

Continued next page

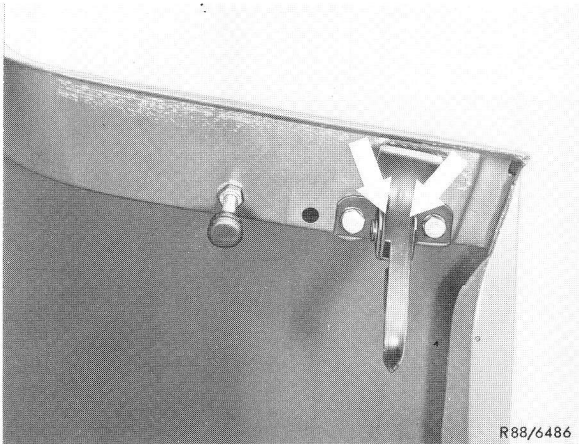

- Locking catches.

Type 100: 2 locking catches.