


Replace fuel filter element

Every 45 000 km / 30 000 miles

Engine M 100

- Remove lower housing after loosening fixing screw (1).
- Take out filter element and clean housing.
- Install new filter element with new seal ring in the filter cover.
- Check sealing.

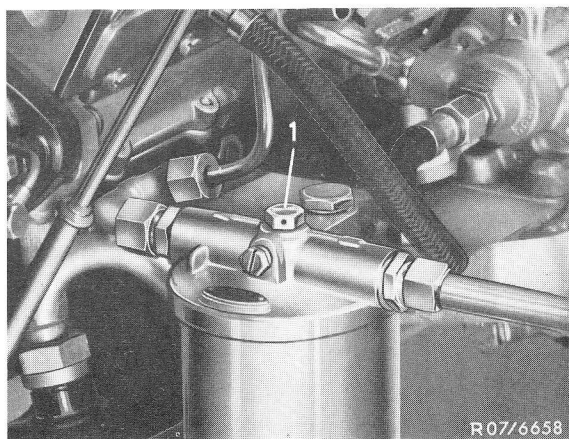

1 Fixing screw