

Every 15 000 km / 10 000 miles



USA Version as from Model Year 1972

Japan Version as from January 1973

Engine M 110 114 115 116 117 130 180


M 116, 117


- Pull cylinder crankcase breather hoses from cylinder head covers.

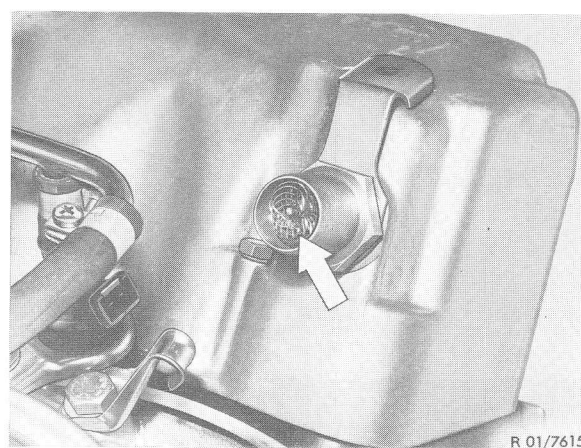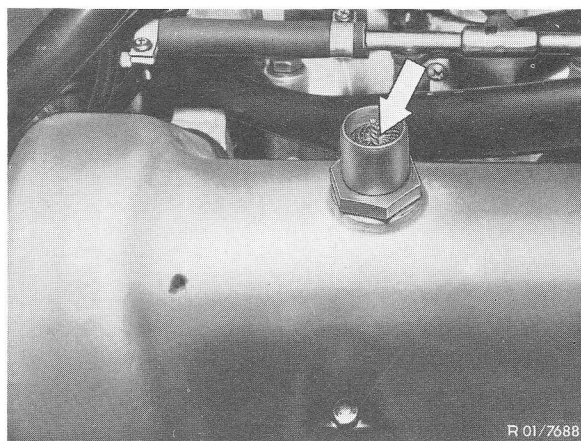


M 110

- Pull cylinder crankcase breather hose from air filter.

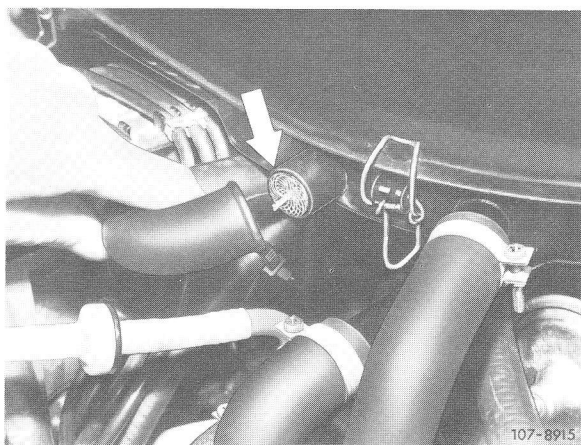


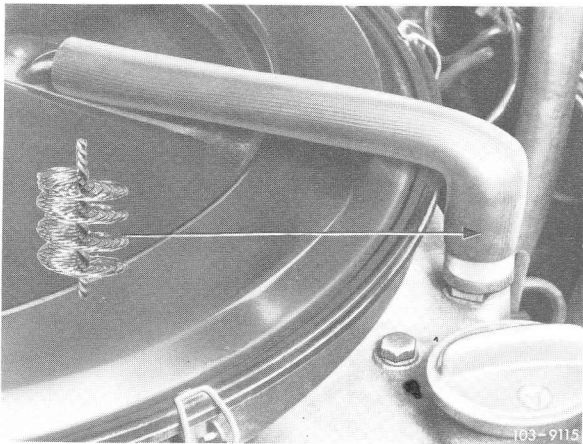**M 114, 130, 180**

- Pull cylinder crankcase breather hose from cylinder head cover.

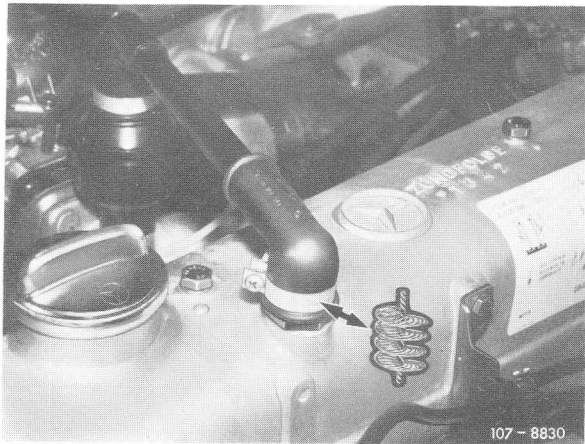**M 115**

- Pull cylinder crankcase breather hose from cylinder head cover.

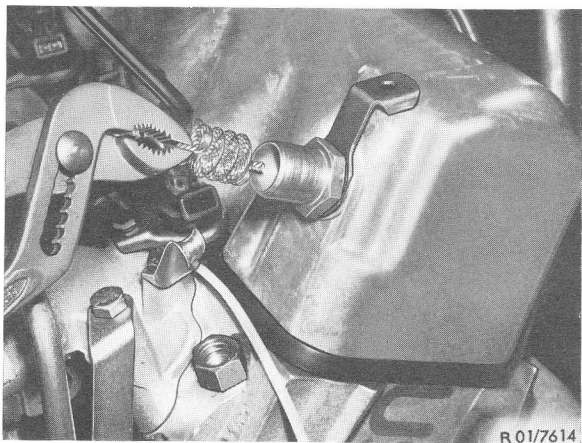

- Pull out flame guard filament with pliers.
- Clean filament in dry-cleaning gasoline and blow off.
- Install flame guard filament with long wire end in inward direction.