


At the 2nd maintenance job,
then every 15 000 km /10 000 miles

Types 100 109

- Drain condensation from air reservoir. To do this pull the drain valve (14 – see arrow) for approx. 2 seconds until no more condensation escapes.

Note: A yellowish to pale brown coloration of the condensation is normal during operation. Check the air compressor only if the condensation is deep brown in color.

There are two drain valves on the type 100.

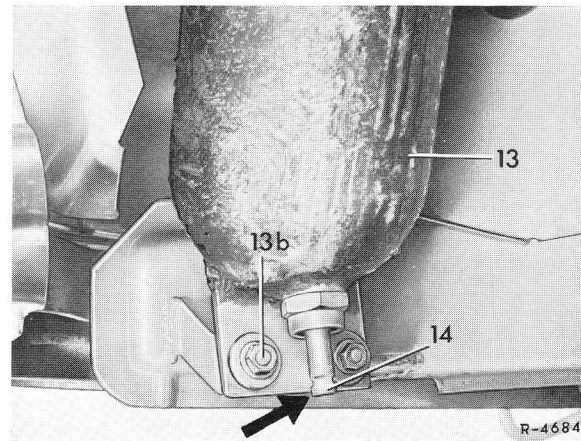

13 Air reservoir
14 Drain valve