


All types

At the first and second maintenance jobs,
then every 15 000 km / 10 000 miles

Filling the brake system

Use only brake fluid specified in pertinent instructions on page 331.

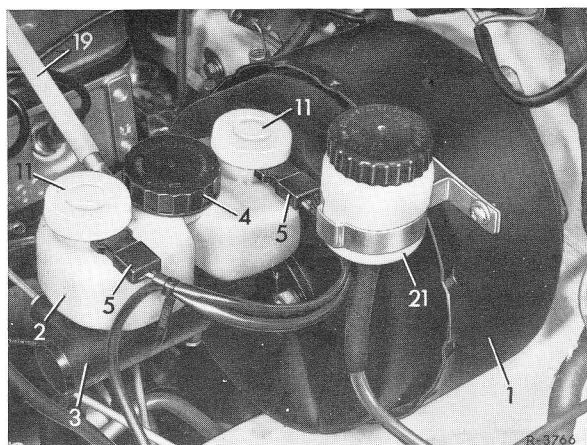


2 Reservoir
4 Top

- Remove top from reservoir and fill with new brake fluid to the marks stamped in the reservoir.

Take care when using brake fluid!

Only put **brake fluid** in containers where there is no possibility of its being drunk inadvertently. (**Fatal dose 100 cc**).

Do not bring brake fluid into contact with the paintwork of the vehicle, as it contains ingredients which act as a solvent for paint.

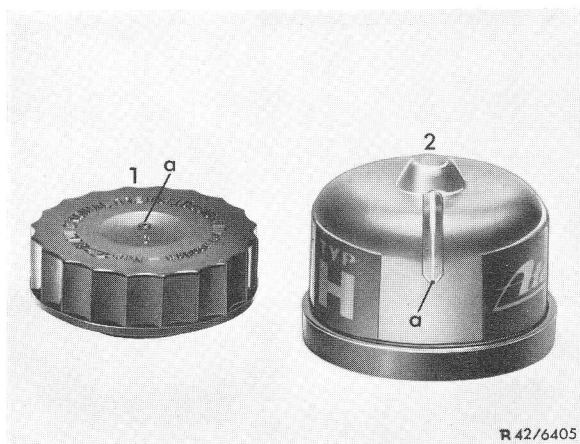

1 Top for all types except type 100
2 Top for type 100
a Ventilation bore

- Replace top. Take care that the ventilation bore in the top is not blocked.