

## Removal

- 1 Remove coupe top and place on pertinent work bench in inverted condition.
- 2 Push closing cap (1) down with plastic wedge.
- 3 Remove closing cap and closing top (2) (Fig. 1).

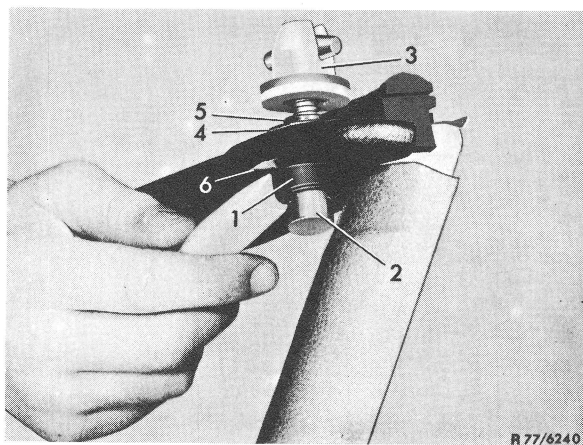


Figure 1

- |                |                 |
|----------------|-----------------|
| 1 Closing cap  | 4 Nut           |
| 2 Closing top  | 5 Bearing       |
| 3 Closing hook | 6 Bearing plate |

- 4 Unscrew closing hook (3) manually.
- 5 Loosen nut (4) and remove bearing (5) with hole plate (6).

## Installation

- 6 For installation proceed vice versa.

Prior to assembly of closing cap (1) adjust closing hook (3) to  $a = 32 \text{ mm}$  (Fig. 2).

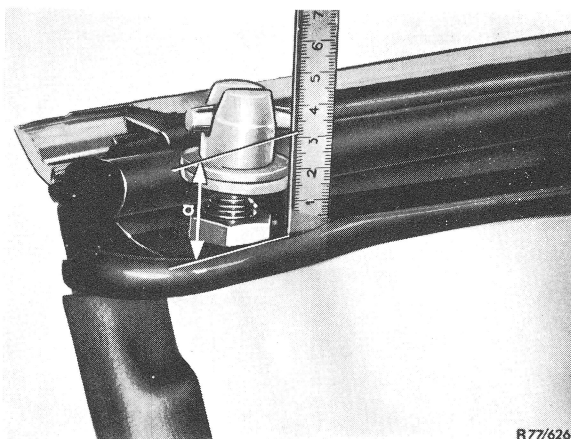


Figure 2  
 $a = 32 \text{ mm}$