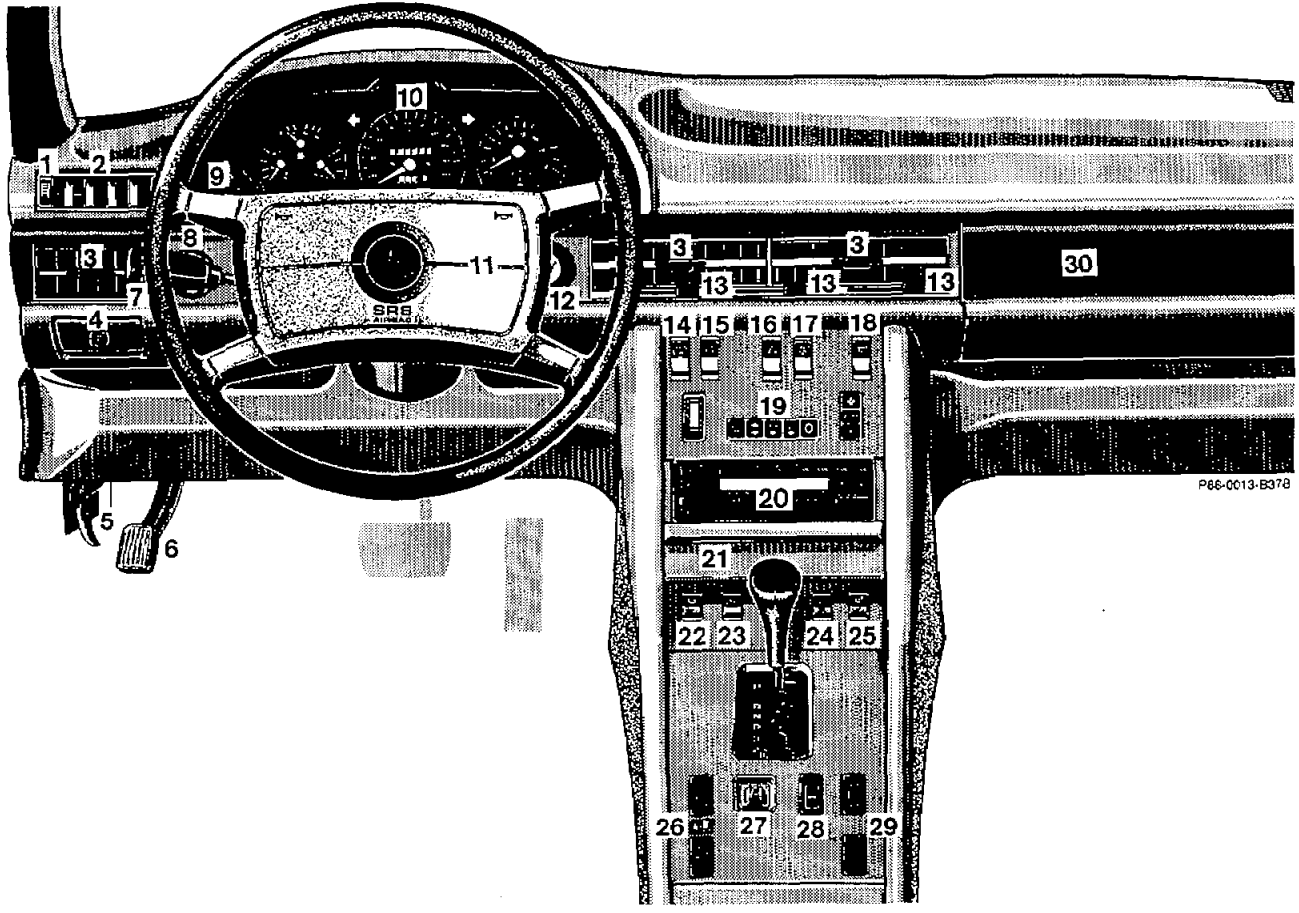
Instruments and Controls

For more detailed descriptions see specified pages.

1 *Air volume control for side air outlets (page 22)*
2 Side air outlets (page 22)
3 Adjustable air outlets (page 22)
4 Parking brake release (page 58)
5 Hood lock release (page 74, 75)
6 Parking brake pedal (page 58)
7 Combination switch (page 50)
8 Exterior lamp switch (page 49)
9 Cruise control (page 62)
10 Instrument cluster (page 12)
11 Horn, driver airbag (page 43)
12 Steering lock with ignition/starter switch (page 48)
13 Air volume control lever for center and side air outlets (page 22)
14 Rear window defroster switch (page 54)
15 Air recirculation switch (page 22)
16 Hazard warning flasher switch
17 Snow chain switch (page 69)
18 Rear passenger compartment lamp switch (page 55)
19 Automatic climate control (page 22)
20 Radio
21 Ashtray with lighter (pages 53, 99)
22 Left front seat heater switch (page 34)
23 Fanfare horn control switch
24 Switch for rear window sun shade
25 Right front seat heater switch (page 34)
26 Left power window switch group (page 56)
27 Adjusting switch for exterior mirror on front passenger side (page 52)
28 Loudspeaker front to rear fader control
29 Right power window switch group (page 56)
30 Front passenger airbag (page 43)


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
SRS
AIRBAG
P86-0013-B378