


1477

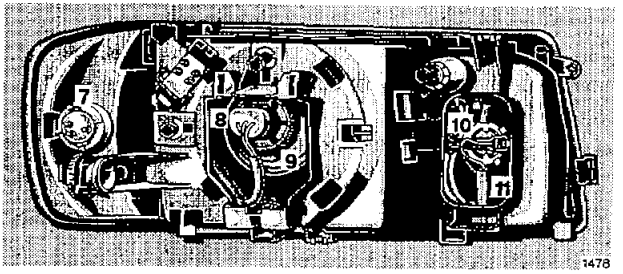

1478

Headlamp Adjustment

Correct headlamp adjustment is extremely important. Check and readjust headlamps at regular intervals and when a bulb has been replaced.

Replacing Bulbs

Do not touch glass portion of bulb with bare hands. Use plain paper or a clean cloth.

Install only 12 volt bulbs with the specified watt rating.

Headlamp Assembly

1 Headlamp horizontal adjustment screw

2 Headlamp vertical adjustment screw

3 420 SEL, 560 SEL: Fog lamp adjusting screw

4 Plastic nut for housing of turn signal, parking, side marker and standing lamps

5 High and low beam headlamp cover

6 420 SEL, 560 SEL: Fog lamp cover

7 Turn signal, parking, side marker and standing lamp bulb

8 Electrical connector for high and low beam headlamp bulb

9 Clamping ring for high and low beam headlamp bulb

10 420 SEL, 560 SEL: Fog lamp bulb

11 420 SEL, 560 SEL: Electrical connector for fog lamp bulb

Warning!

Halogen lamps contain pressurized gas. A bulb can explode if you:

- **Touch or move it when hot.**
- **Drop the bulb.**
- **Scratch the bulb.**