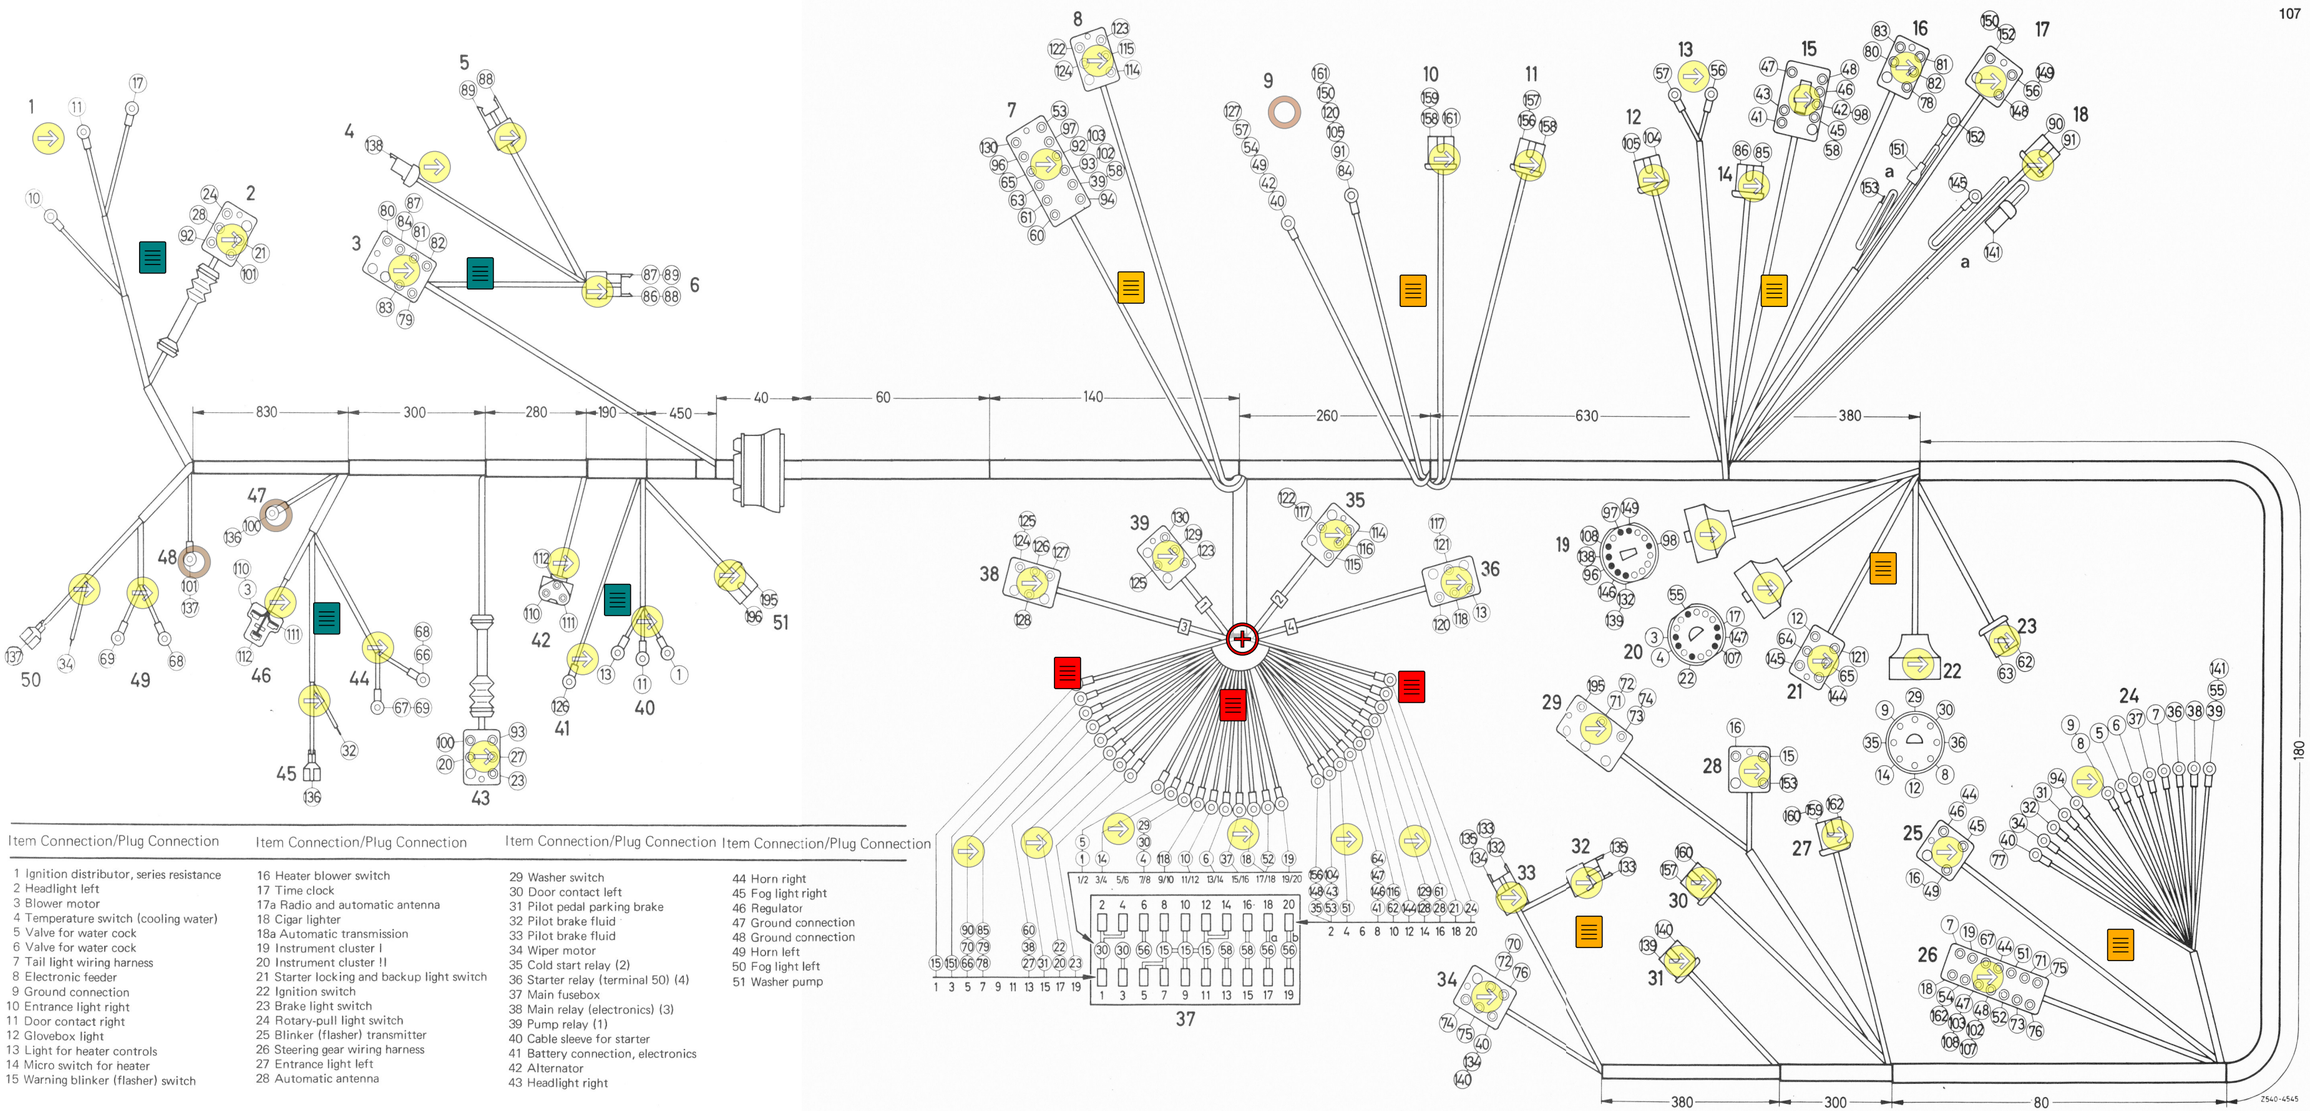

Item	Connection/Plug Connection	Item	Connection/Plug Connection	Item	Connection/Plug Connection	Item	Connection/Plug Connection
1	Ignition distributor, series resistance	16	Heater blower switch	29	Washer switch	44	Horn right
2	Headlight left	17	Time clock	30	Door contact left	45	Fog light right
3	Blower motor	17a	Radio and automatic antenna	31	Pilot pedal parking brake	46	Regulator
4	Temperature switch (cooling water)	18	Cigar lighter	32	Pilot brake fluid	47	Ground connection
5	Valve for water cock	18a	Automatic transmission	33	Pilot brake fluid	48	Ground connection
6	Valve for water cock	19	Instrument cluster I	34	Wiper motor	49	Horn left
7	Tail light wiring harness	20	Instrument cluster II	35	Cold start relay (2)	50	Fog light left
8	Electronic feeder	21	Starter locking and backup light switch	36	Starter relay (terminal 50) (4)	51	Washer pump
9	Ground connection	22	Ignition switch	37	Main fusebox		
10	Entrance light right	23	Brake light switch	38	Main relay (electronics) (3)		
11	Door contact right	24	Rotary-pull light switch	39	Pump relay (1)		
12	Glovebox light	25	Blinker (flasher) transmitter	40	Cable sleeve for starter		
13	Light for heater controls	26	Steering gear wiring harness	41	Battery connection, electronics		
14	Micro switch for heater	27	Entrance light left	42	Alternator		
15	Warning blinker (flasher) switch	28	Automatic antenna	43	Headlight right		