

72.1 Removal and Installation of Cover Molding at Lock End

107

Removal

- 1 Remove screws on molding (1) (Fig. 1).

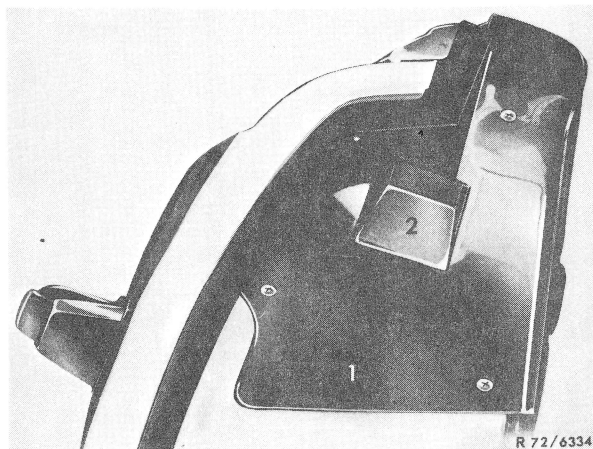


Fig. 1

- 1 Molding at lock end
- 2 Guide bracket

- 2 Insert assembly shim (3) between guiding bracket (2) and molding (1).

Note: The assembly shim is cut from a plastic sheet 0.6 mm thick according to Fig. 2.

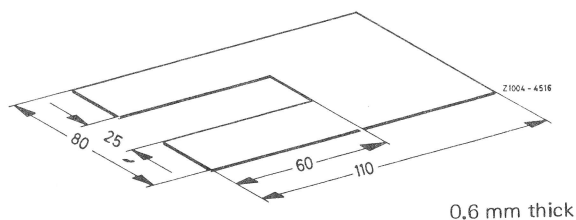


Fig. 2

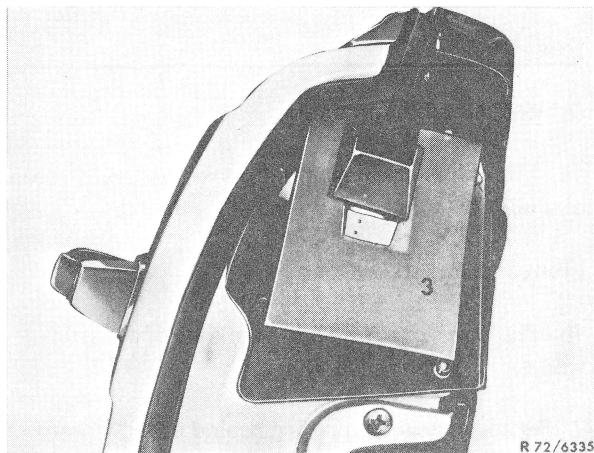


Fig. 3

- 3 Assembly shim

- 3 Carefully slide molding downwards and lift slightly with plastic wedge at top of door lining, if required.

Installation

- 4 For installation proceed vice versa.