



Removal

- 1 Open enclosure for first aid kit and warning triangle.

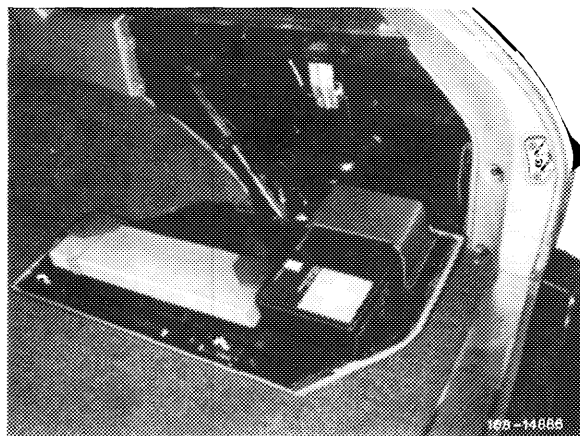

- 2 Unscrew fastening screws.

- 3 Remove paneling from clips in range of rear center pillar and remove.

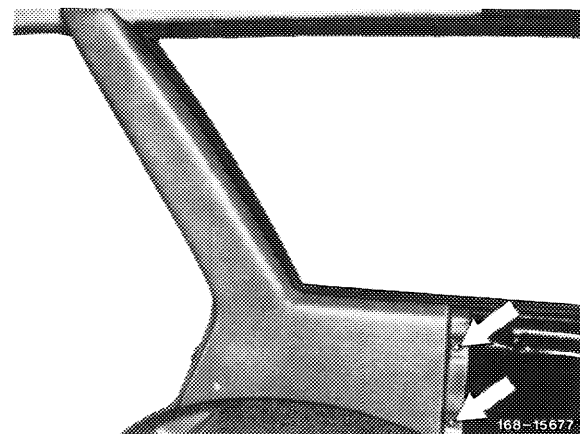

Installation

- 4 Attach paneling by means of clips to rear center pillar and screw down.

- 5 Close enclosure for first aid kit and warning triangle.

