


Removal

- 1** Remove side wall in rear of vehicle (68–456).
- 2** Remove window molding strip laterally on roof (68–410).
- 3** Remove screws (1) from shutter (2).

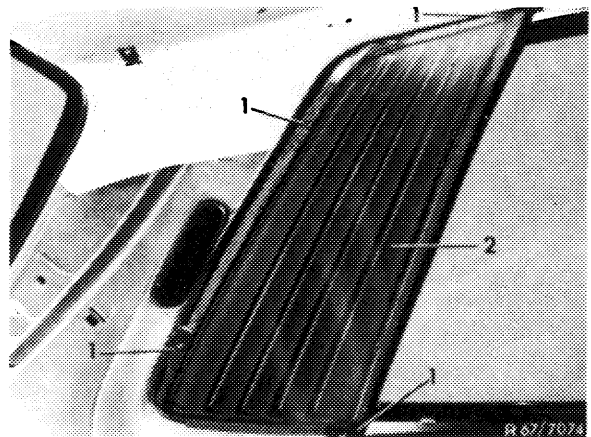

Installation

- 4** For installation proceed vice versa.

For sealing, glue a Moltopren strip to shutter starting from below. Apply double Moltopren strip in upper range. Watch out for water leaks during assembly.