Removal

1 Remove teleflex cable control (77.0–200).

2 Remove holder with motor and gear unit (77.0–300).

- 3 Remove rear window.
- 4 Remove rear seat and backrest.

5 Loosen headlining from the rear up to center of vehicle.

6 Remove soundproofing (23) along rear edge of sliding roof frame (21) (Fig. 1).

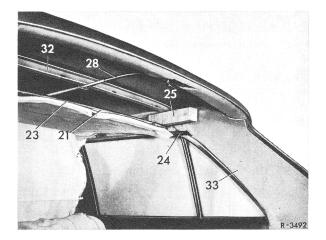


Fig. 1 (shown on Model 114/115)21 Sliding roof frame28 Teleflex tube23 Soundproofing32 Roof frame24 Water drain hose33 Rear pillar25 Wooden block, 5 cm

7 Loosen sliding roof frame (21) up to roof cutout, pull slightly downwards at the rear and insert a wooden block (25) 5 cm high at corners.

8 Insert wooden block (26) 6.5 cm high in roof cutout between sliding roof frame (21) and roof panelling (36) (Fig. 2).

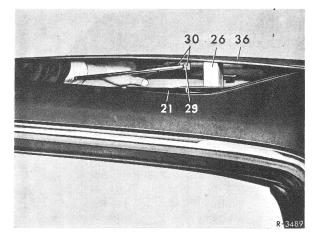


Fig. 2

- 21 Sliding roof frame
- 26 Wooden block, 6.5 cm high
- 29 Holding plate for teleflex tube
- 30 Fastening screws of holding plate for teleflex tube
- 36 Roof panelling

9 Unscrew fastening screws (30) of holding plate (29) for teleflex tube.

10 Unscrew pipe clips (34) on rear pillar and on roof frame (Fig. 3).

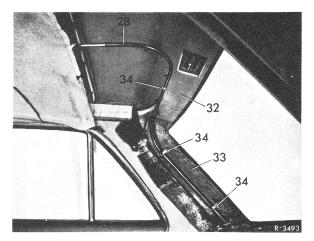


Fig. 3 (shown on Model 114/115)28 Teleflex tube33 Rear pillar32 Roof frame34 Pipe clip

11 Move teleflex tube (28) forward and simultaneously toward the left, so that the teleflex tube can be pulled out of rear pillar (Fig. 4).



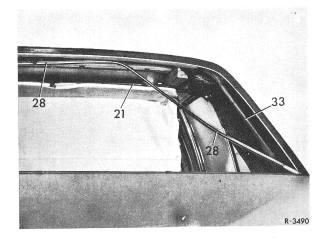


Fig. 4

- 21 Sliding roof frame
- 28 Teleflex tube
- 33 Rear pillar

12 Remove teleflex tube through cutout for rear window.

Installation

13 Carefully introduce new teleflex tube between roof frame and sliding roof frame (21), and move sufficiently toward the front and left until the teleflex tube can be introduced into the rear pillar (33).

Caution! Do **not bend** teleflex tube during installation, since this would make teleflex cable control hard to move.

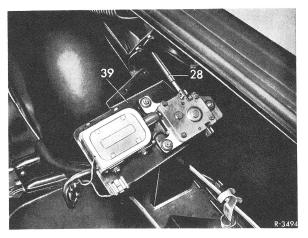


Fig. 5 (shown on Model 114/115) 28 Teleflex tube 29 Holder with gear unit

14 Introduce teleflex tube into trunk compartment until the holder (39) can be flanged to the teleflex tube together with the gear unit (Fig. 5).

15 Move holder (39) into correct position and screw on.

16 Attach teleflex tube to rear pillar and to roof frame (Fig. 3).

17 For further installation proceed vice versa.