

Note

Plastic clips should be removed from packages which have been opened and placed in water in order to ensure that their elasticity is maintained.

Trimstrip Above Light Unit

- 1 Remove light unit (82.1—210).
- 2 Unscrew sheet metal screws on trimstrip.
- 3 Remove trimstrip.

Trimstrip Laterally on Front Fender

- 1 Unscrew front nut on trimstrip.
- 2 Push trimstrip in center out of clip hole by means of a plastic wedge.
- 3 Slide trimstrip forward and remove.

Trimstrip on Windshield Post

- 1 Remove coupe top or open roadster top.
- 2 Remove seal for side window from sealing rail on windshield post.
- 3 Unscrew the 5 screws on sealing rail.
- 4 Remove sealing rail.
- 5 Remove the 3 screws from trimstrip.
- 6 Remove trimstrip.

Trimstrip at Entrance

- 1 Unscrew screw on trimstrip front and nut rear.
- 2 Push trimstrip from clip holes with plastic wedge and remove.

Trimstrip on Driver's Door

- 1 Pull out sealing frame of driver's door at rear in trimstrip range.
- 2 Unscrew nut of trimstrip screw.
- 3 Push trimstrip out of clip holes with plastic wedge.
- 4 Remove trimstrip in rear direction.

Trimstrip on Upper Edge of Driver's Door

- 1 Remove outside rear view mirror on driver's door (72.1—270).
- 2 Lift trimstrip from clips as shown in Fig. 1.

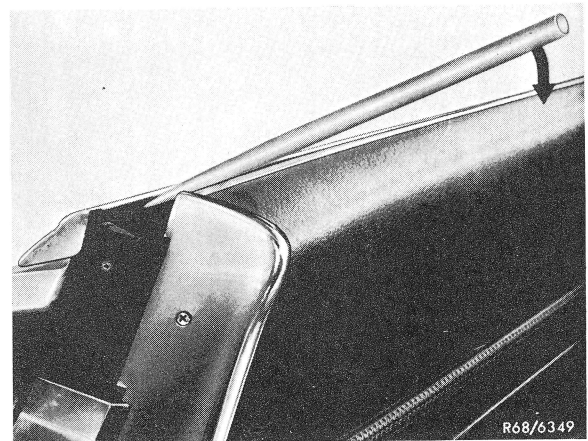


Fig. 1

Trimstrip Laterally on Rear Fender

- 1 Unscrew nut on trimstrip in wheel housing.
- 2 Slide trimstrip forward and remove.

68.1

Removal and Installation of Trim Strips

Trimstrip on Top of Coupe Top

- 1 Remove headlining on coupe top (68.1—430).
- 2 Remove foam rubber insert from top.
- 3 Drill pop rivets on trimstrip and remove.
- 4 Remove trimstrip.
- 5 Prior to assembly, glue paper tape to trimstrip as a protection against noise on outside surface.

Trimstrip on Snap Lock of Trunk Lid

- 1 Pull out sealing frame of trunk lid in trimstrip range.
- 2 Remove rear lights.
- 3 Remove lower half of lock (2) on rear center panel.

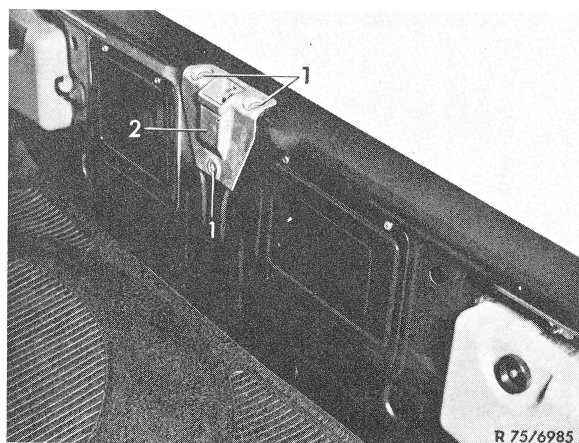


Fig. 2

- 1 Screws 2 Lower half of lock

- 4 Unscrew fastening nuts (3) on trimstrip.
- 5 Remove three-part trimstrip with rubber shim.
- 6 For installation proceed vice versa.

Attention! Watch out for water leaks when mounting parts.

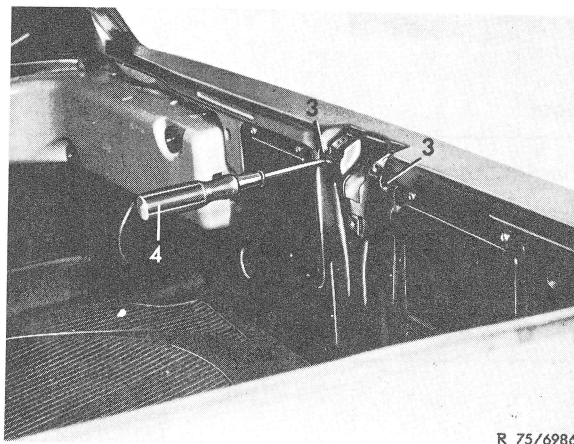


Fig. 3

- 3 Screws on trimstrip 4 Socket wrench

Trimstrip on Well Lid

- 1 Unscrew fastening nuts of rosette.
- 2 Remove rosette and trimstrip cover.
- 3 Unscrew sealing nuts on trimstrip.
- 4 Remove trimstrip.
- 5 Lightly grease trimstrip shim with vaseline as a protection against noise.
- 6 Mount intermediate layer on trimstrip.
- 7 Slide square head screws into trimstrip.
- 8 Attach trimstrip outside first.
- 9 Tighten sealing nuts starting in center.
- 10 Mount trimstrip cover and rosette.