

## Removal

**Note:** Always replace lining following removal.

- 1 Loosen lining inside (1).
- 2 Unbend tab (2) of fastening rail.
- 3 Remove fastening rail from anchoring of top well lid.
- 4 Remove fastening rail together with lining.
- 5 Loosen lining and Moltopren layer from rail.

## Installation

- 6 For installation proceed vice versa.  
Remove glue residuals with test gasoline. Glue lining back to rail.

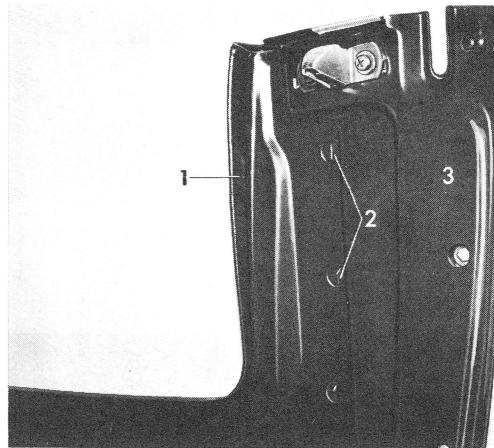


Figure 1

- 1 Inside lining  
2 Tab of fastening rail