


Color code of vacuum lines for central interlock


| Vacuum line | Color code | |
|------------------------|-------------|--------------|
| | 1st version | 2nd version |
| Interlocking line (25) | white | yellow-red |
| Unlocking line (26) | black | yellow-green |

Removal

- 1 Remove door lining.
- 2 Disconnect safety clip (34) of control rod (3).

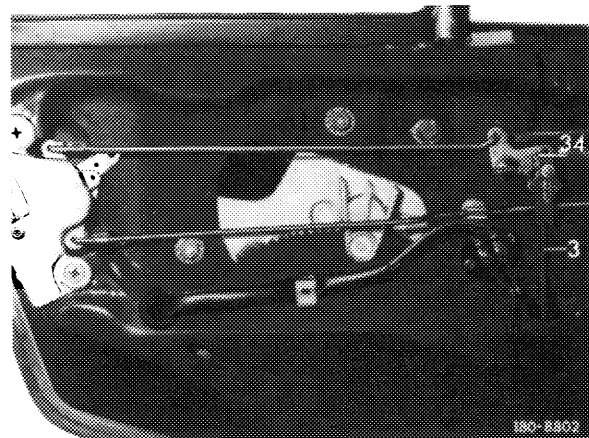

- 3 Pull connections (17) with interlocking line (25) and unlocking line (26) from vacuum element (1).
- 4 Unscrew oval head screws (35).
- 5 Remove vacuum element with control rod.
- 6 Loosen conternut (36) on vacuum element (1) and unscrew control rod (3).

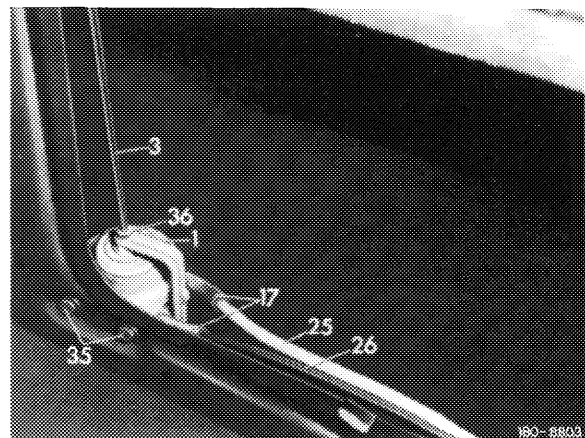


Installation

7 Screw control rod (3) into vacuum element (1) up to stop and secure with conternut (36).

8 Insert vacuum element with control rod into rear door and attach with oval head screws (35).

9 Connect interlocking line (25) and unlocking line (26) with connections (17) to vacuum element (1).

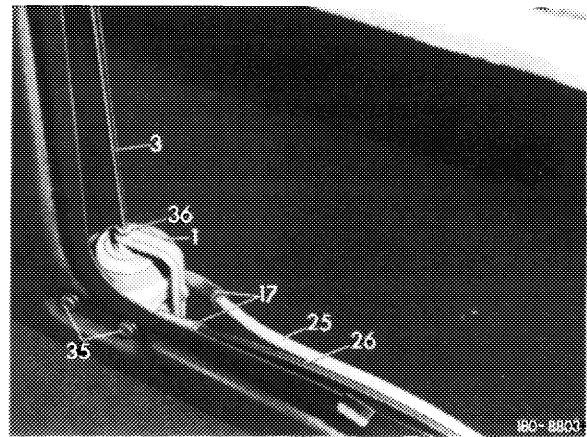

10 Secure control rod (3) with safety clip (34).

11 Install door lining.

