

Color code of vacuum lines for central interlock

Vacuum line	Color code	
	1st version	2nd version
Suction line from distributor to vacuum supply tank (23)	yellow	grey-yellow


Removal

- 1 Unscrew hex. screws (66) at front left under fender.
- 2 Remove bulkhead (67) front left.




3 Remove lining of front wall left inside.

4 Unscrew hex. nuts (68).

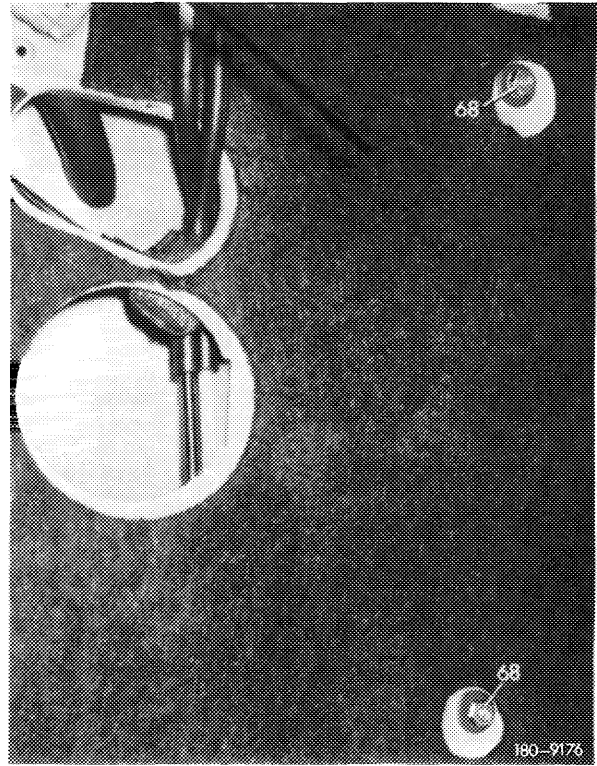

5 Remove vacuum supply tank (6) with bracket (70).


6 Pull suction line (23) out of seal.

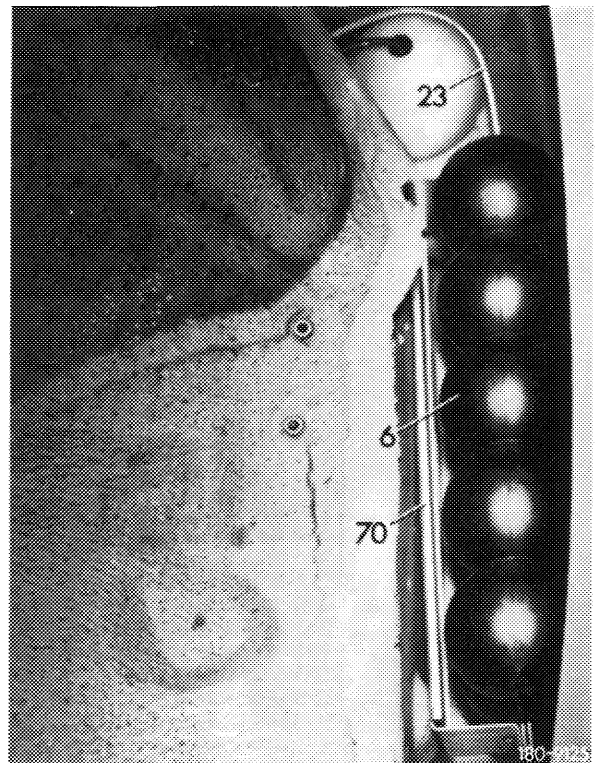

Installation

6 Introduce vacuum element (4) with compression spring (18) into sleeve (19).

7 Connect connection (17) with interlocking line (25) to vacuum element (4).

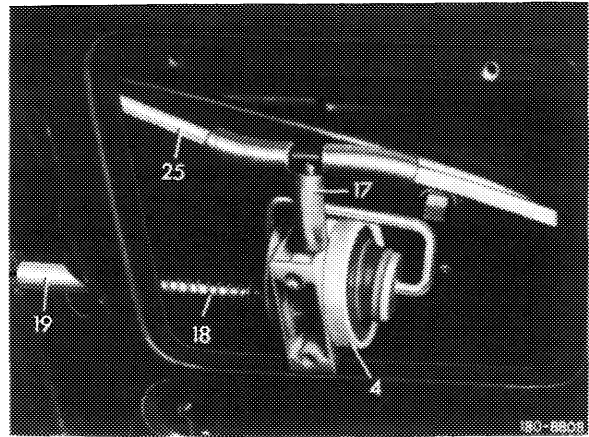

8 Screw cover of rear center piece (29) with oval head screws (30) to vacuum element.

9 Insert righthand cover of rear center piece (29) and attach with oval head screws (28).

