


At the first and second maintenance jobs,
then every 7 500 km / 5 000 miles

Engine 100.980


Tightening torque, kpm

Fixing bolt for filter bowl	Version A	Requires only slight tightening
	Version B	1 + 0.5


- Loosen fastening screw (1), take off filter bowl (6) and remove fine mesh element.
- Empty bowl, wash out and blow out.

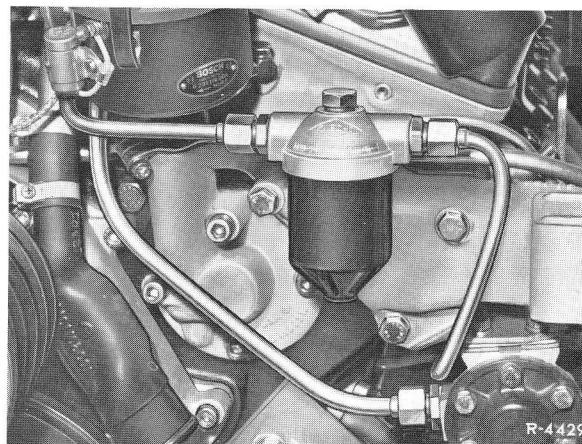

- Clean fine mesh element (5) in cleaning gasoline with both openings closed and blow out with a weak air current from inside to outside.
- Renew rubber seal (3).
- Fit fine mesh element **with the attached felt facing upwards** into bowl and reassemble.

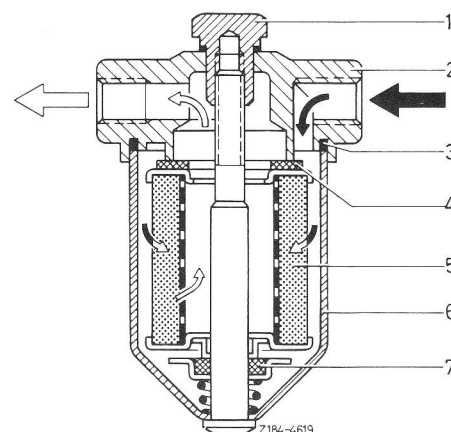

Version A

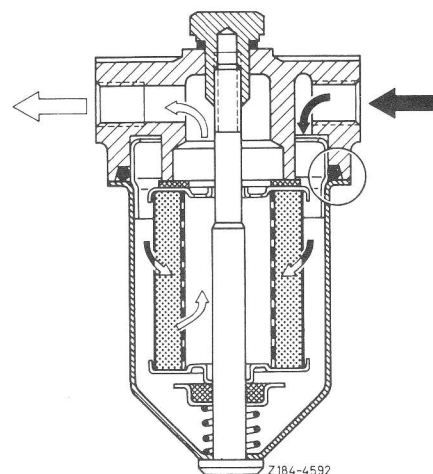

Version B