

Figure 1

22 Screws

23 Handle

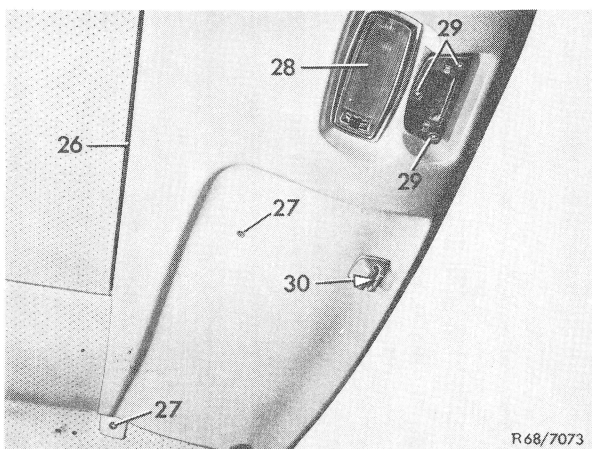


Figure 2

26 Chrome-plated rail

29 Base plate

27 Screw

30 Counter support of  
sun visor

28 Interior light

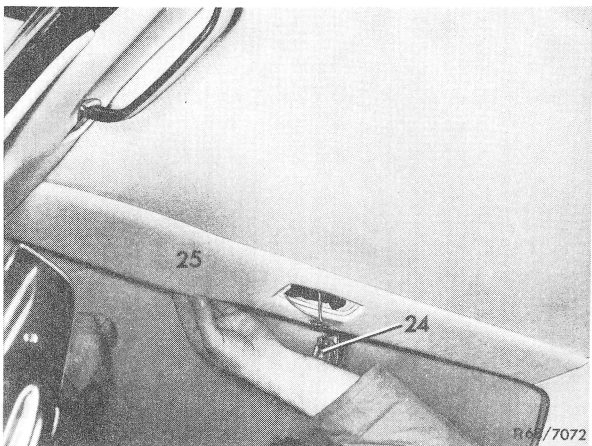


Figure 3

24 Ceiling light

25 Molding strip

## Lateral Molding Strip on Roof

- 1 Remove molding strip on rear window.
- 2 Remove cap from handle by means of plastic wedge.
- 3 Remove screws (22) from handle.
- 4 Remove sun visor.
- 5 Push lateral window strip in range of sun visor down.
- 6 Pull molding strip at an angle in upward and forward direction out of rear pillar holding clips.

## Molding Strip on Top of Windshield

- 1 Remove both lateral molding strips on window.
- 2 Remove rear view mirror.
- 3 Remove base plate (29).
- 4 Remove interior light (28).
- 5 Remove counter support of sun visor (30).
- 6 Remove chrome-plated rail (26).
- 7 Unscrew screws (27).
- 8 Remove molding strip.

## Molding Strip on Rear Window

- 1 Pull out ceiling light (24) and leave hanging.
- 2 Pull molding strip rear left and right slightly down and knock with hand out holding clips in forward direction.
- 3 Pull molding strip in center slightly downwards and remove out of lateral molding strips at the left and right.

## Lateral Molding Strip on Windshield

Refer to 68.1—400.