

1 Remove pedal assembly, but **do not** disconnect brake cable control at draw link (42.1—510, 42.2—510, 42.3—510).

2 Remove rivets on both sides of bearing tube (4) by means of an 8.2 mm drill (Fig. 1).

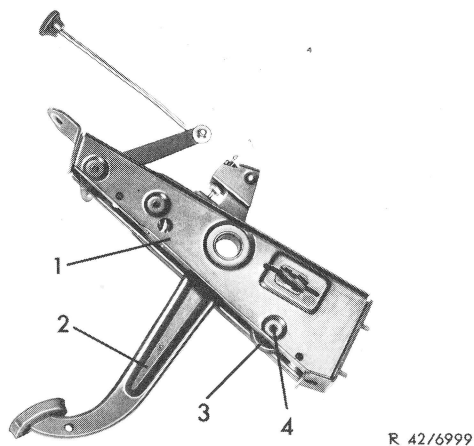


Fig. 1

1 Pedal assembly
2 Pedal

3 Stop rubber
4 Bearing tube

3 Remove bearing tube and drill existing bore to 8.2 mm.

4 Place new stop rubber (3) on bearing tube (4). Insert bearing tube together with stop rubber into bracket and attach snap ring and hex. nut by means of a hex. screw 8 x 30 (Fig. 2).

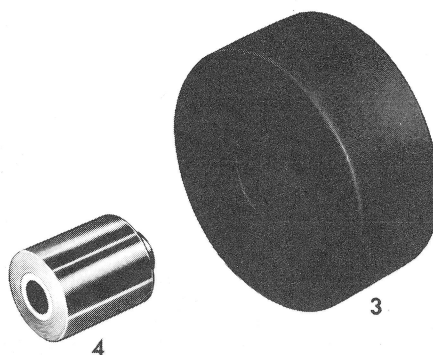


Fig. 2

3 Stop rubber

4 Bearing tube