

Removal

1 Unscrew all hex. nuts (63) from mounting plate front right under fender (Fig. 1).

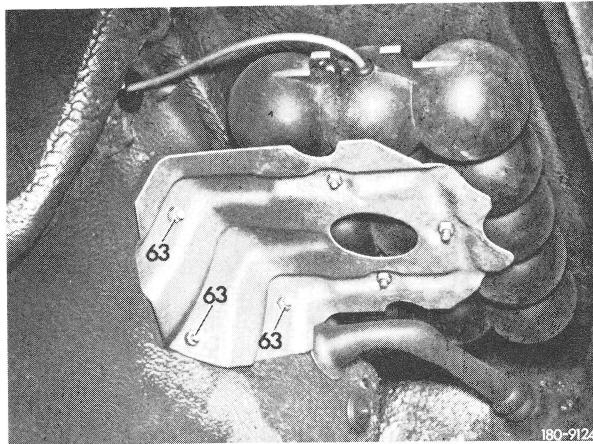


Fig. 1
63 Hex. nut

2 Remove vacuum-supply tank (6) with bracket (64).
3 Unscrew hex. nut (65) (Fig. 2) and remove bracket (64).

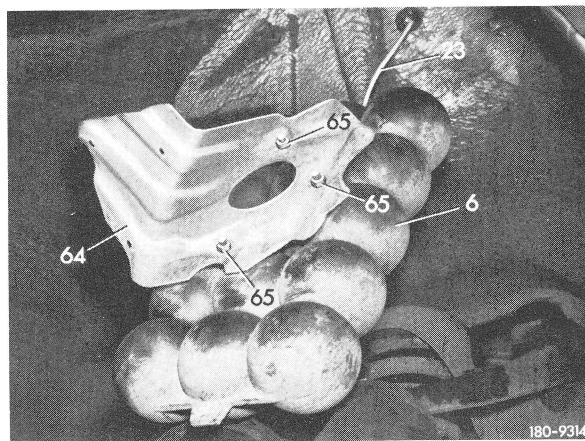


Fig. 2
6 Vacuum-supply tank 64 Bracket
23 Vacuum line „yellow“ 65 Hex. nut

4 Pull vacuum line „yellow“ (23) from seal (Fig. 2).

Installation

5 Push new seal (9) into vacuum-supply tank (6).
6 Slip vacuum line „yellow“ (23) into seal.
7 Screw bracket (64) to vacuum-supply tank (6) by means of hex nut (65) (Fig. 2).
8 Screw vacuum-supply tank (6) with bracket (64) to wheel house sheet-metal with hex. nuts (63) (Fig. 1).